



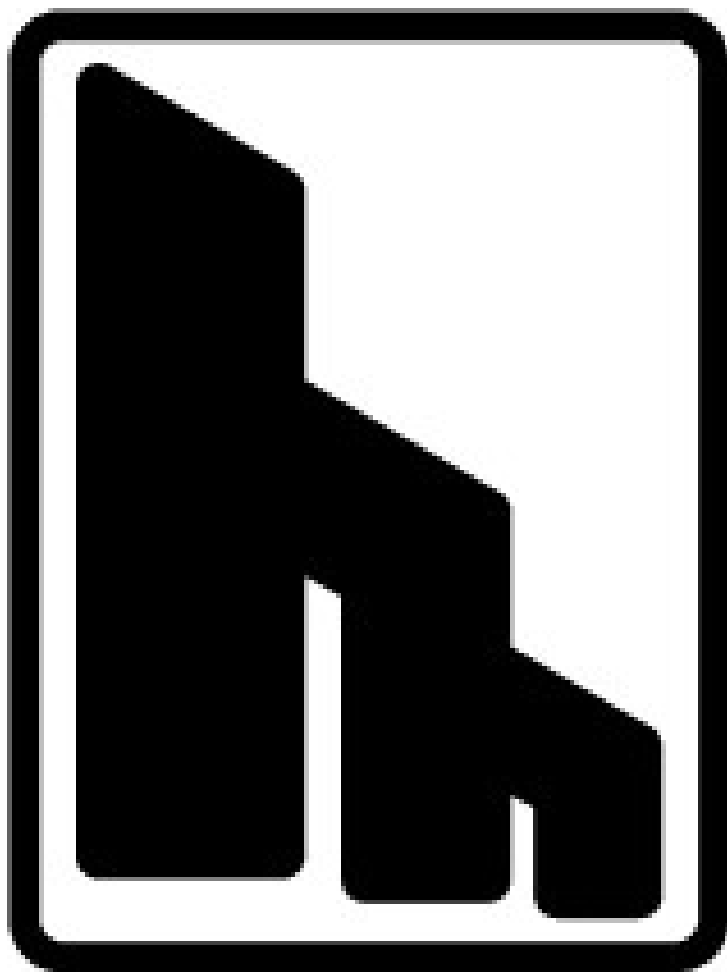

I M E R G I N E

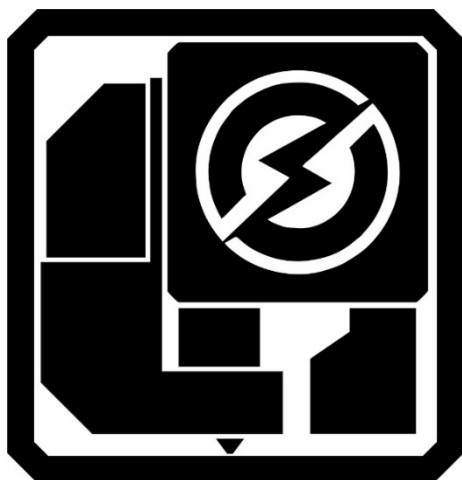


**OPUS-200S
INSTALLATION GUIDE**



INSTALLATION GUIDE

- FRAME

※ Please pay attention to the bracket direction.
(Horizontal: 25mm, Vertical: 20mm)

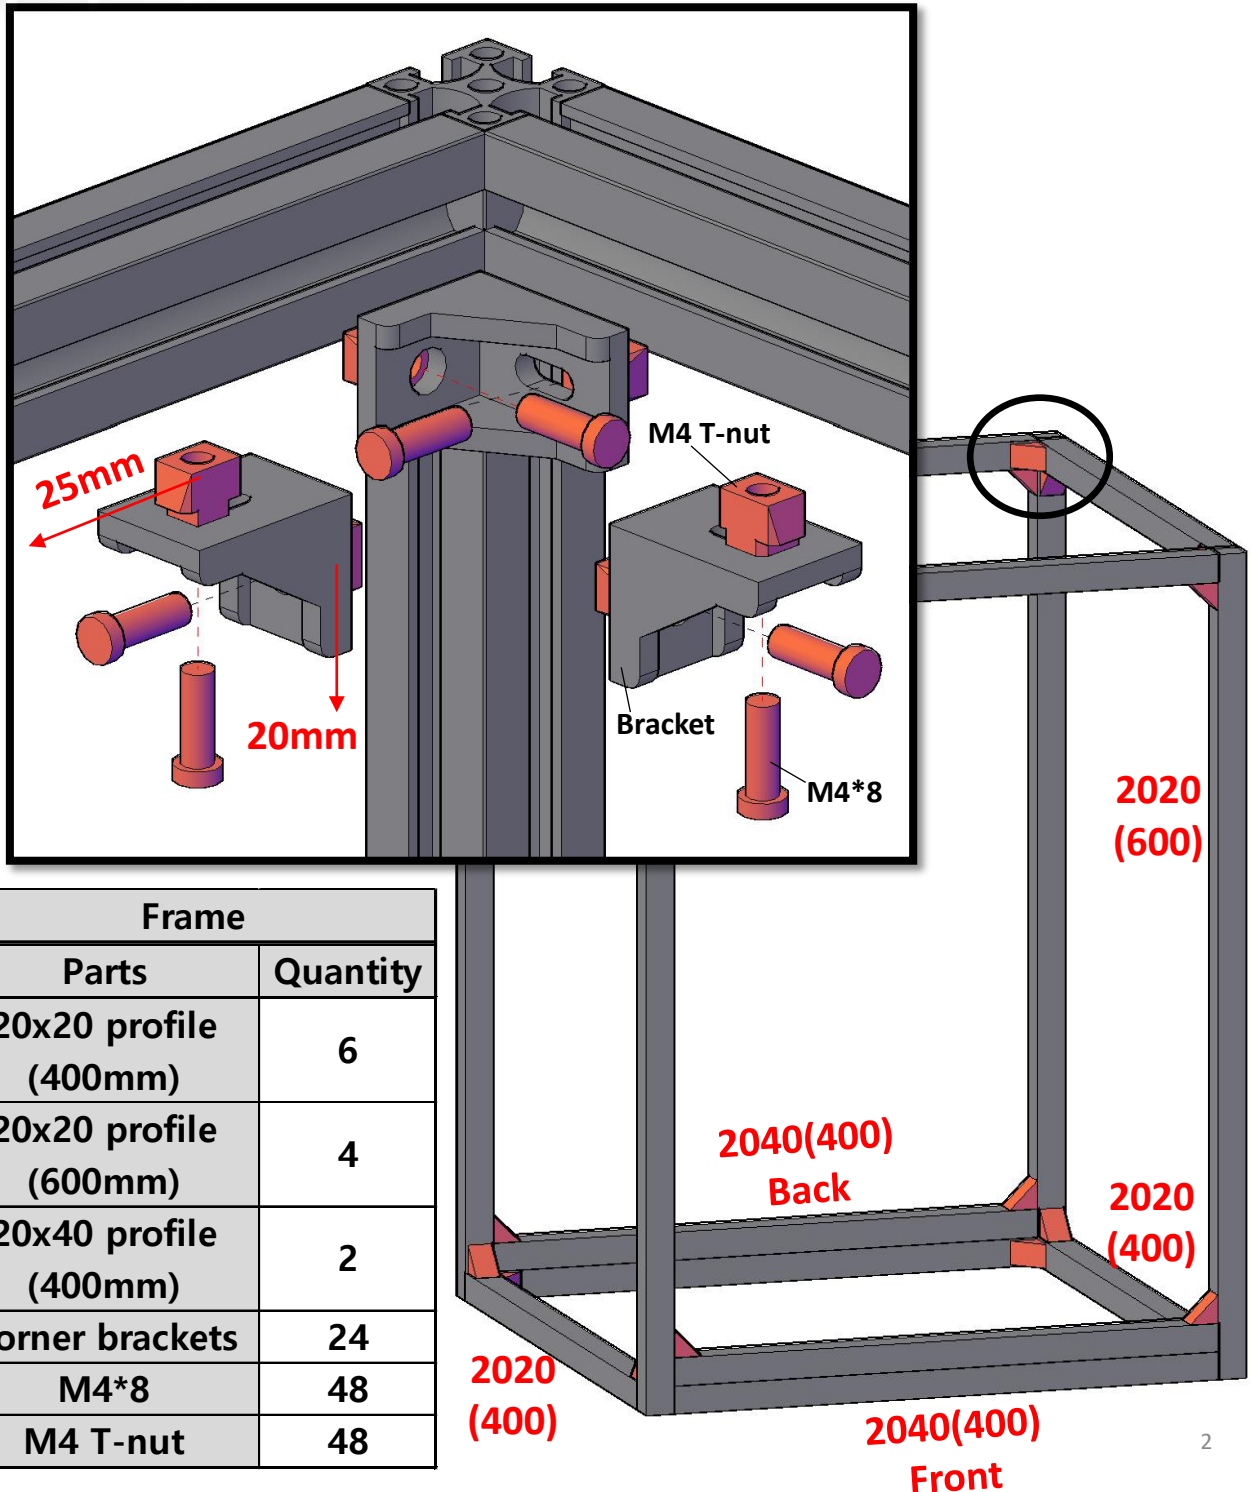




INSTALLATION GUIDE

- FRAME FOOT

Frame foot	
Parts	Quantity
Frame foot	4

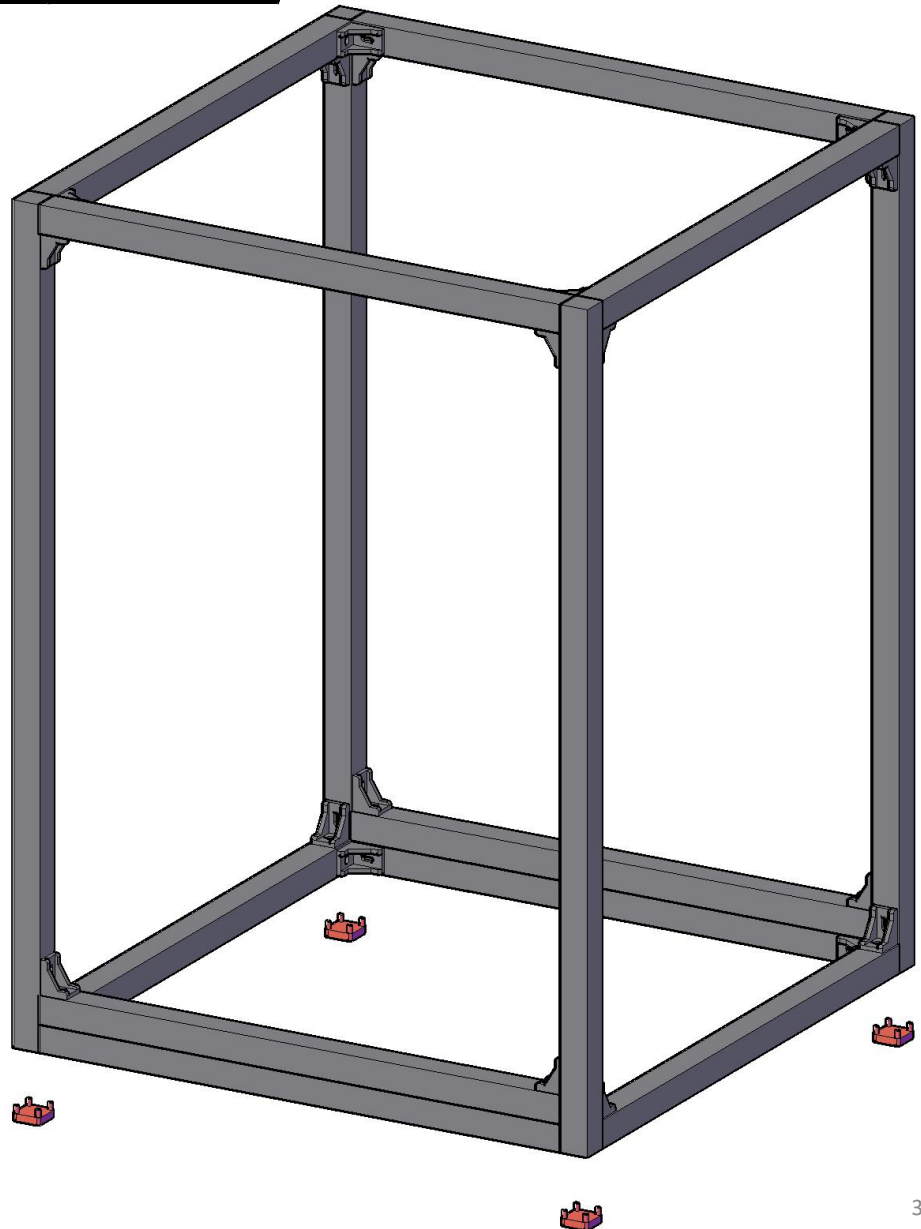




INSTALLATION GUIDE


- X,Y RAIL HOLDER

X, Y rail holder	
Parts	Quantity
Holder	8 pcs / 1set
M5*20	16
M5 nut	16


SET 3

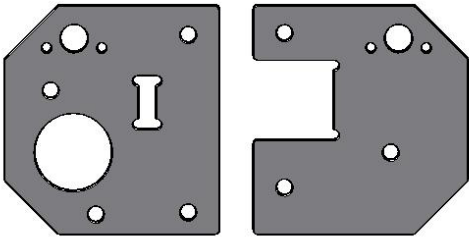


SET 4

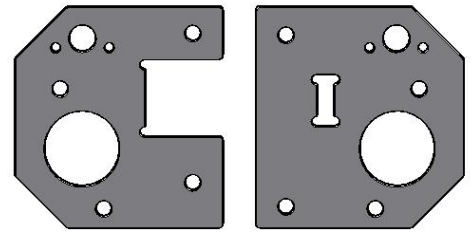

SET 1

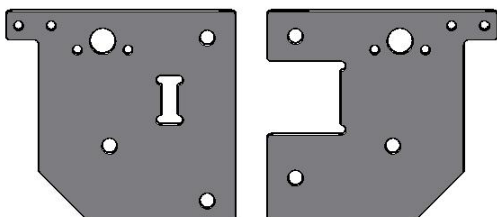


SET 2

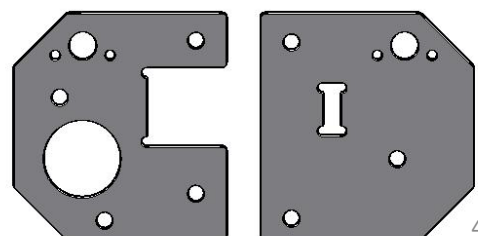




INSTALLATION GUIDE

- SHAFT HOLDER (KP08 BEARING)

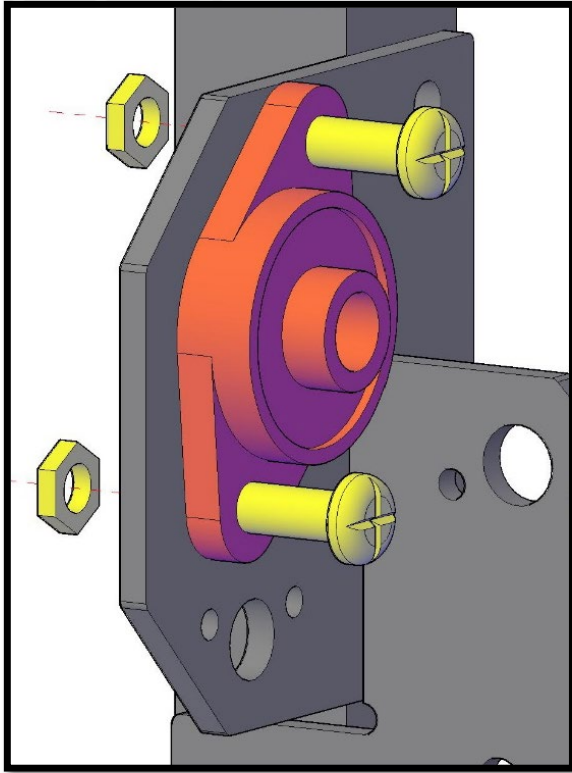


X, Y rail holder	
Parts	Quantity
KP08	4
M5*12	8
M5 nut	8

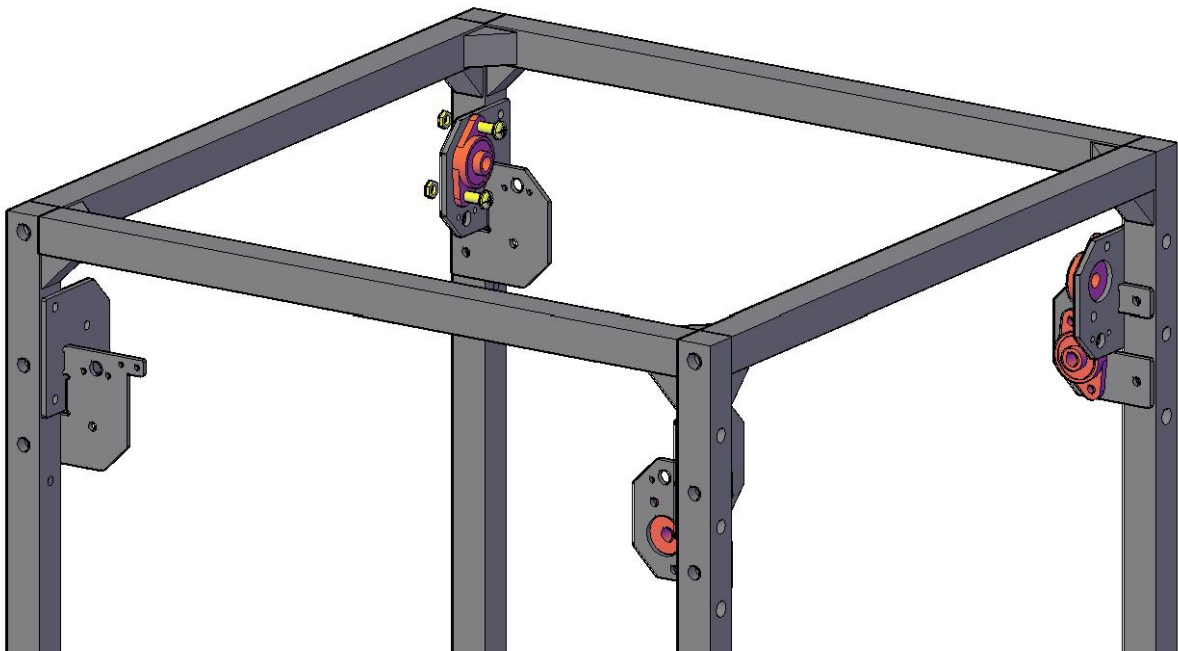




INSTALLATION GUIDE

- SHAFT HOLDER (BRACKET)

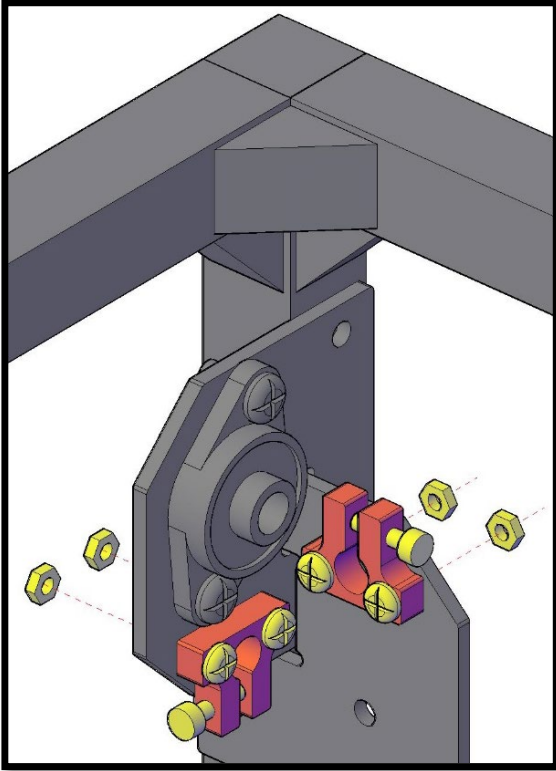

X, Y rail holder	
Parts	Quantity
8mm bracket	8
M3*12	24
M3 nut	16

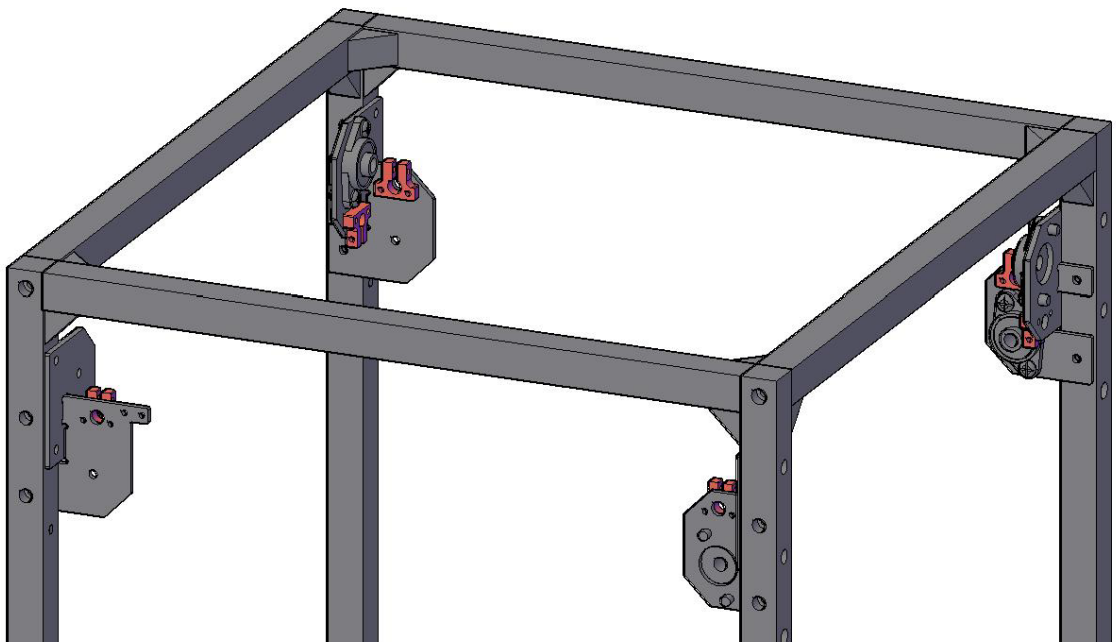




INSTALLATION GUIDE



- X AXIS BELT RAIL

✗ Don't screw the bolts on pulleys too hard before belt tension adjustment.

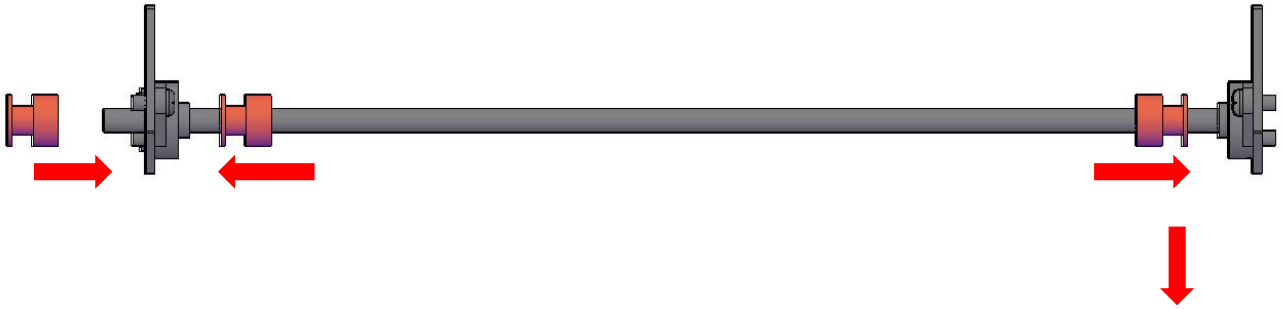

X axis belt rail (Right)	
Parts	Quantity
Guide rod (8 t / 415 mm)	1
Pully(8mm)	3

X axis belt rail (Left)	
Parts	Quantity
M5*30 Hex	2
M5 Idler	2
M5 nut	2
M5 Spacer	2
M5 Washer	2
M5 Nylon nut	2

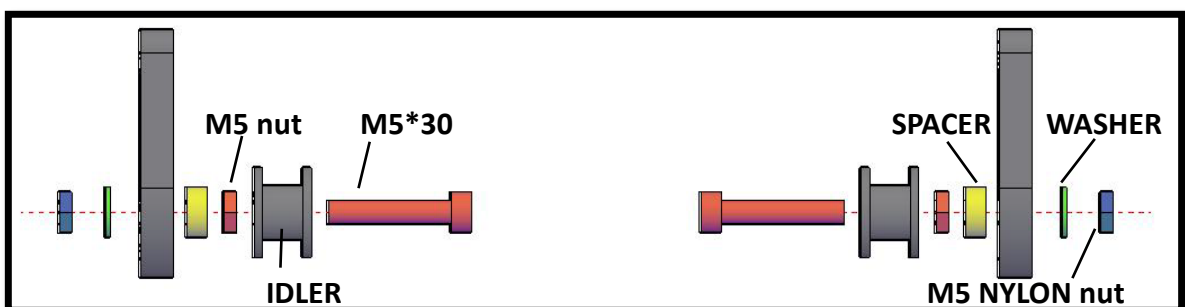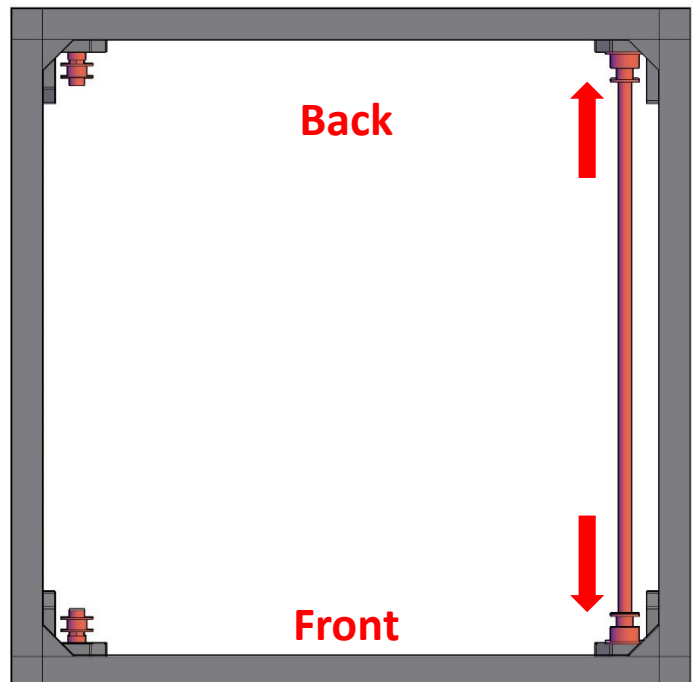




INSTALLATION GUIDE



- Y AXIS BELT RAIL

✗ Don't screw the bolts on pulleys too hard before belt tension adjustment.

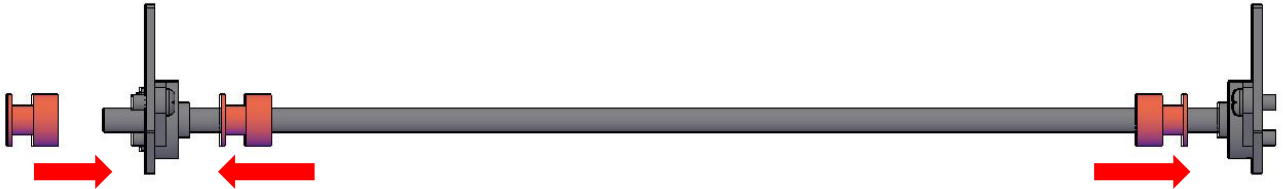

Y axis belt rail (Back)	
Parts	Quantity
Guide rod (8 t / 415 mm)	1
Pully(8mm)	3

Y axis belt rail (Front)	
Parts	Quantity
M5*30 Hex	2
M5 Idler	2
M5 nut	2
M5 Spacer	2
M5 Washer	2
M5 Nylon nut	2

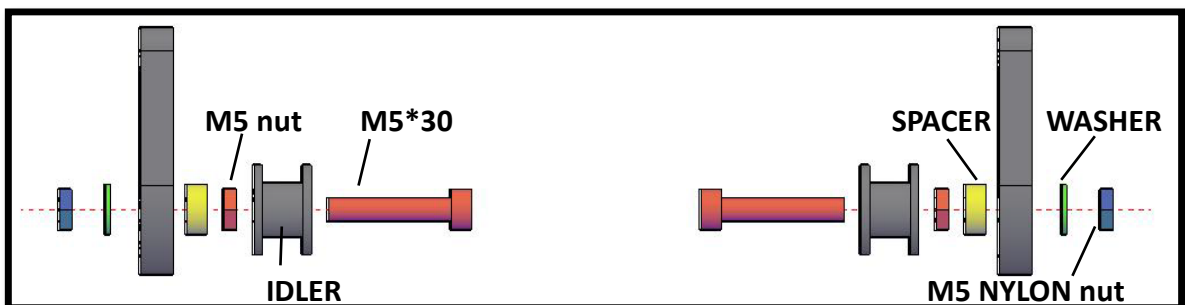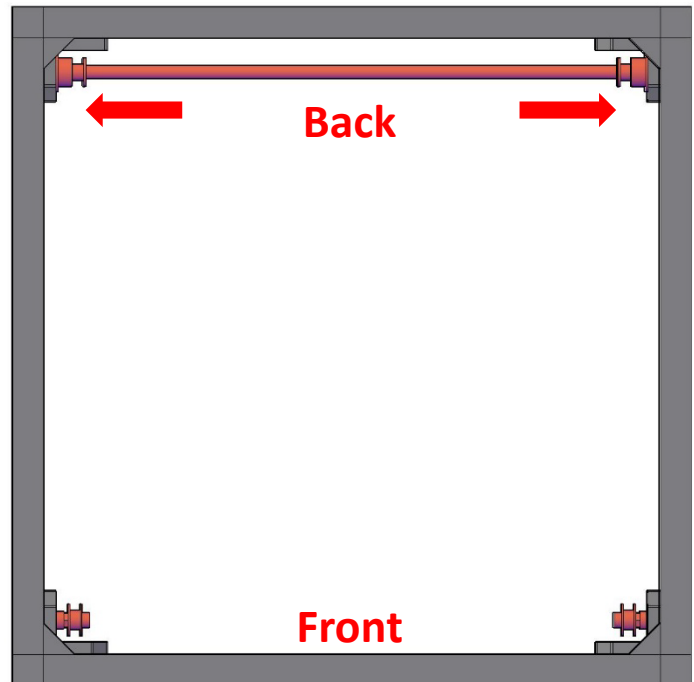





INSTALLATION GUIDE

- X, Y AXIS

MOVEMENT RAIL

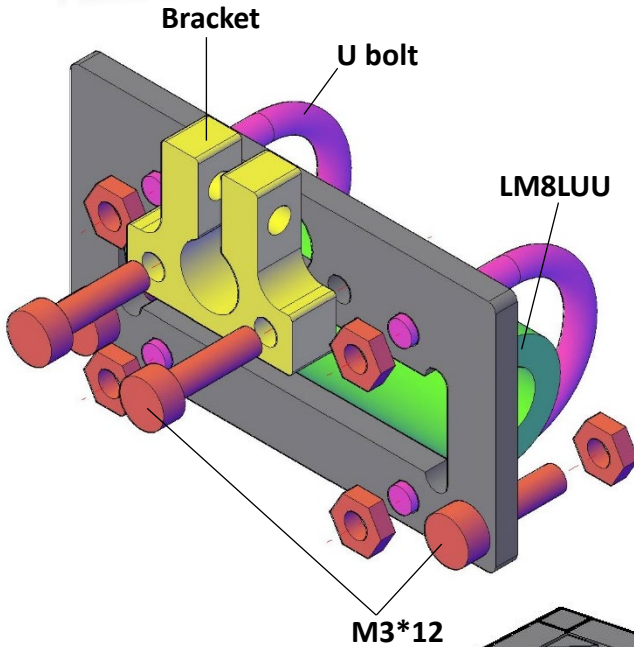


X, Y axis movement rail	
Parts	Quantity
Guide rod (8mm / 400mm)	4
Bushing holder	4
LM8LUU	4
Rod bracket	4
U bolt	8
M3*12	16
M3 nut	32

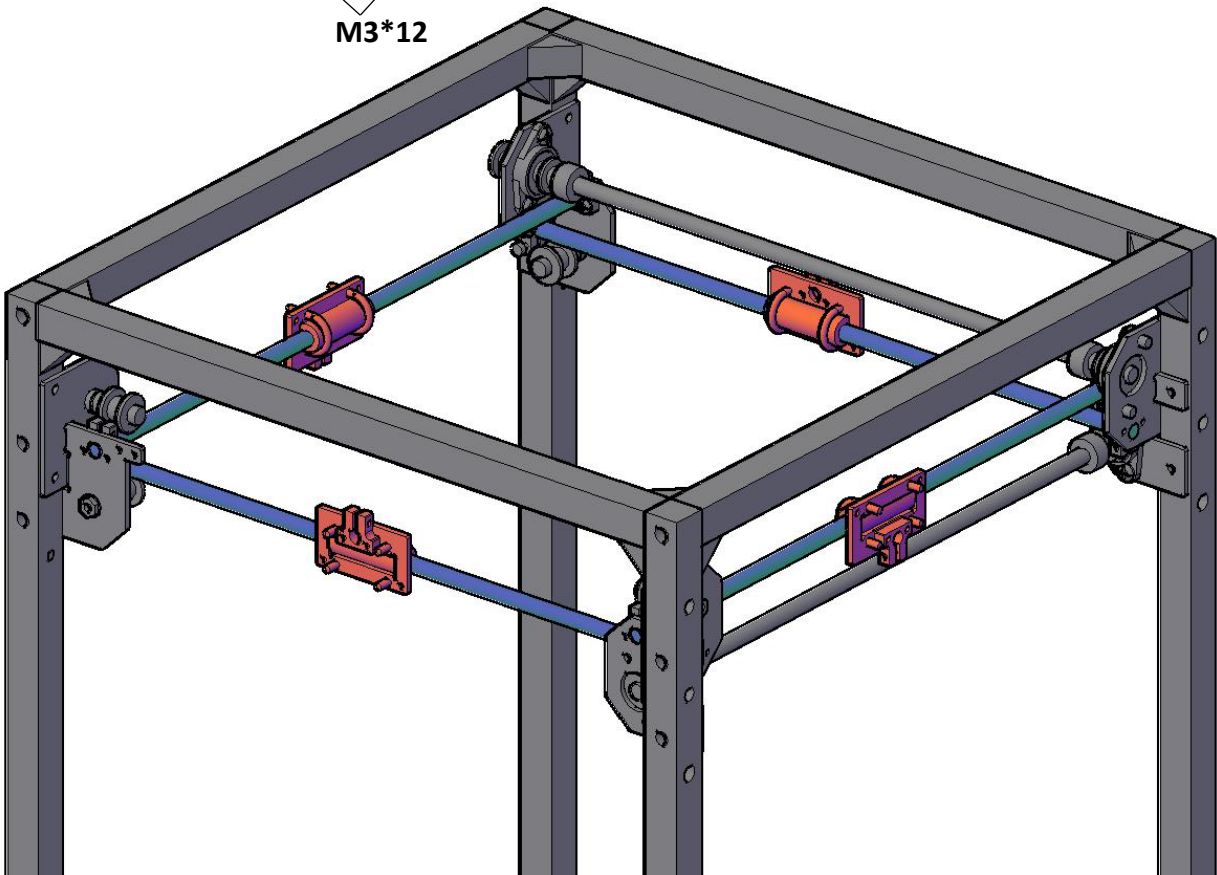




INSTALLATION GUIDE

- CENTRAL RAIL

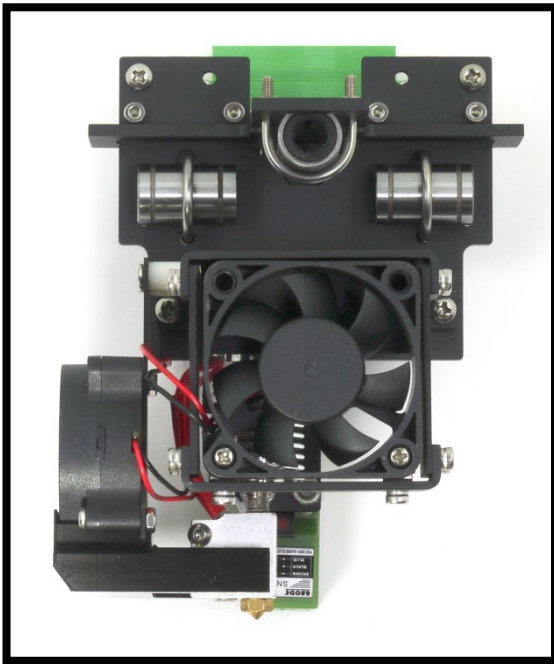

Central rail	
Parts	Quantity
Print-head assembly	1
Steel tube (8 mm / 400 mm)	2
M3*12	4

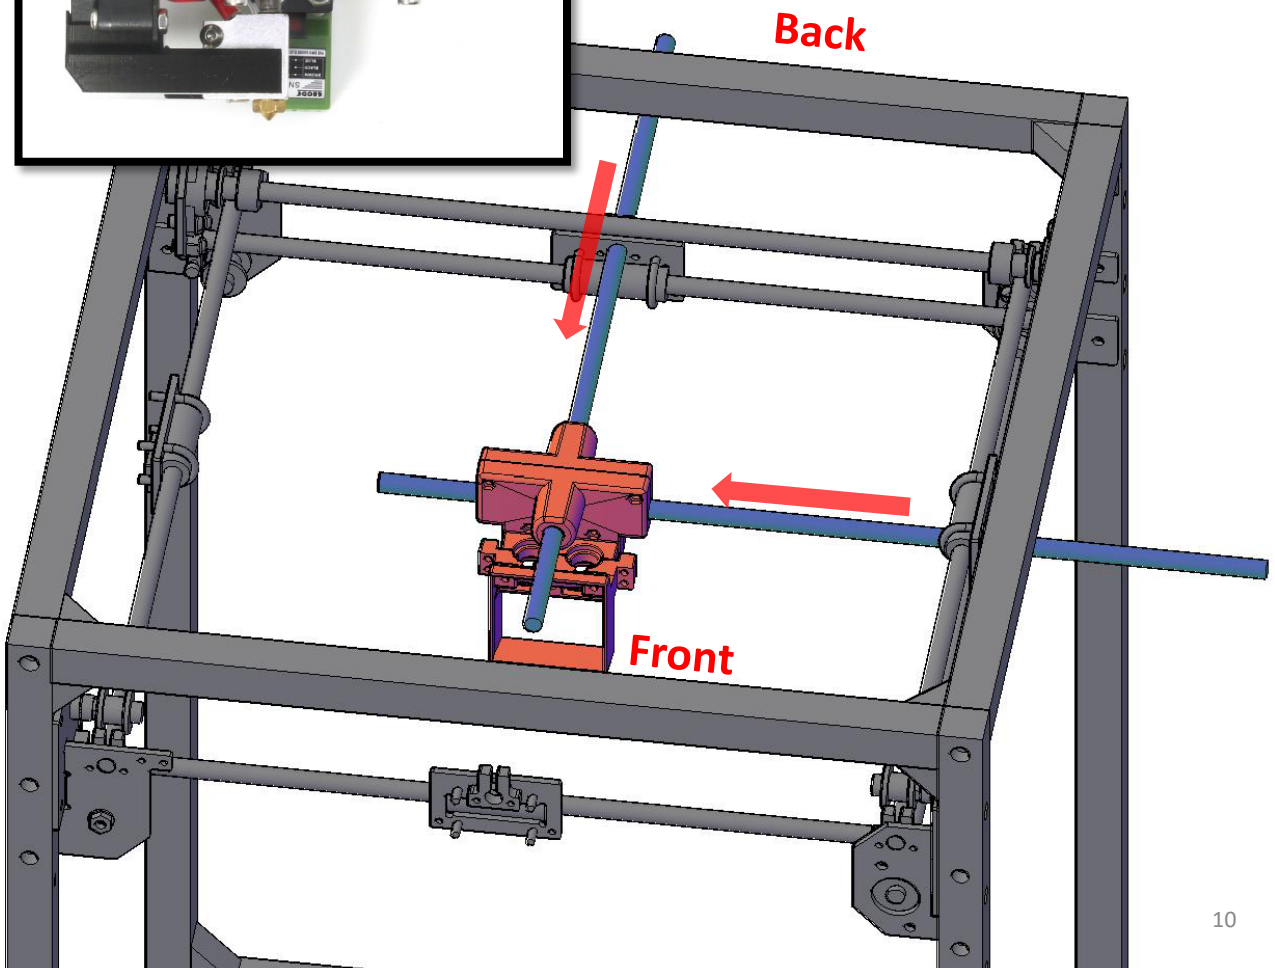





INSTALLATION GUIDE

- BACK FRAME

※ Please pay attention to the bracket direction.
(Horizontal: 25mm, Vertical: 20mm)

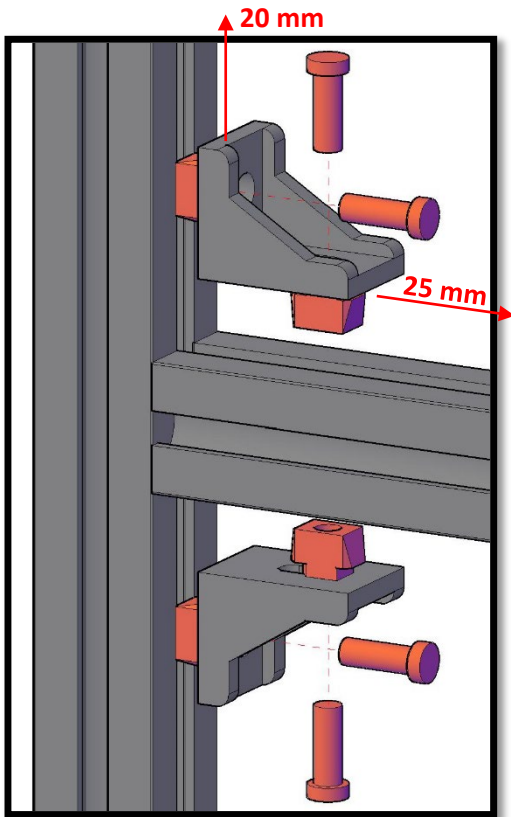

Back frame	
Parts	Quantity
20x20 profile (400mm)	1
M5*20	2
Corner brackets	4
M4*8	8
M4 T-nut	8


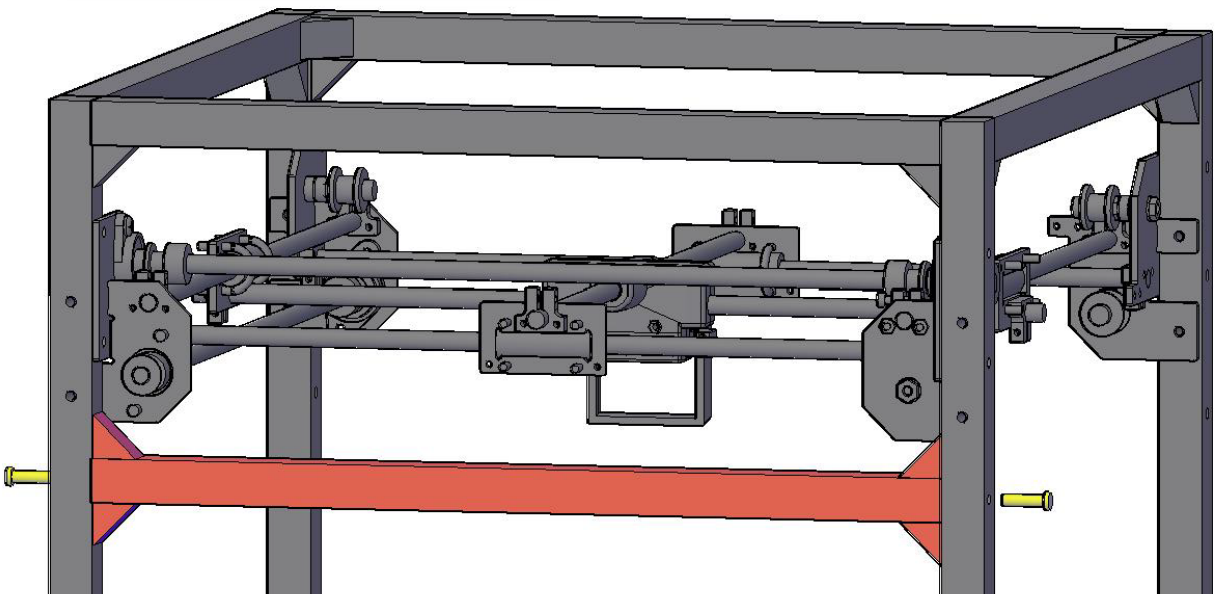




INSTALLATION GUIDE

- Z-AXIS TOP-PLATE

Z-axis top holder	
Parts	Quantity
Z-axis top holder	2
Rod holder(12mm)	2
M5*16	4
M5 nut	4
M5*20	4
M5 nut	4

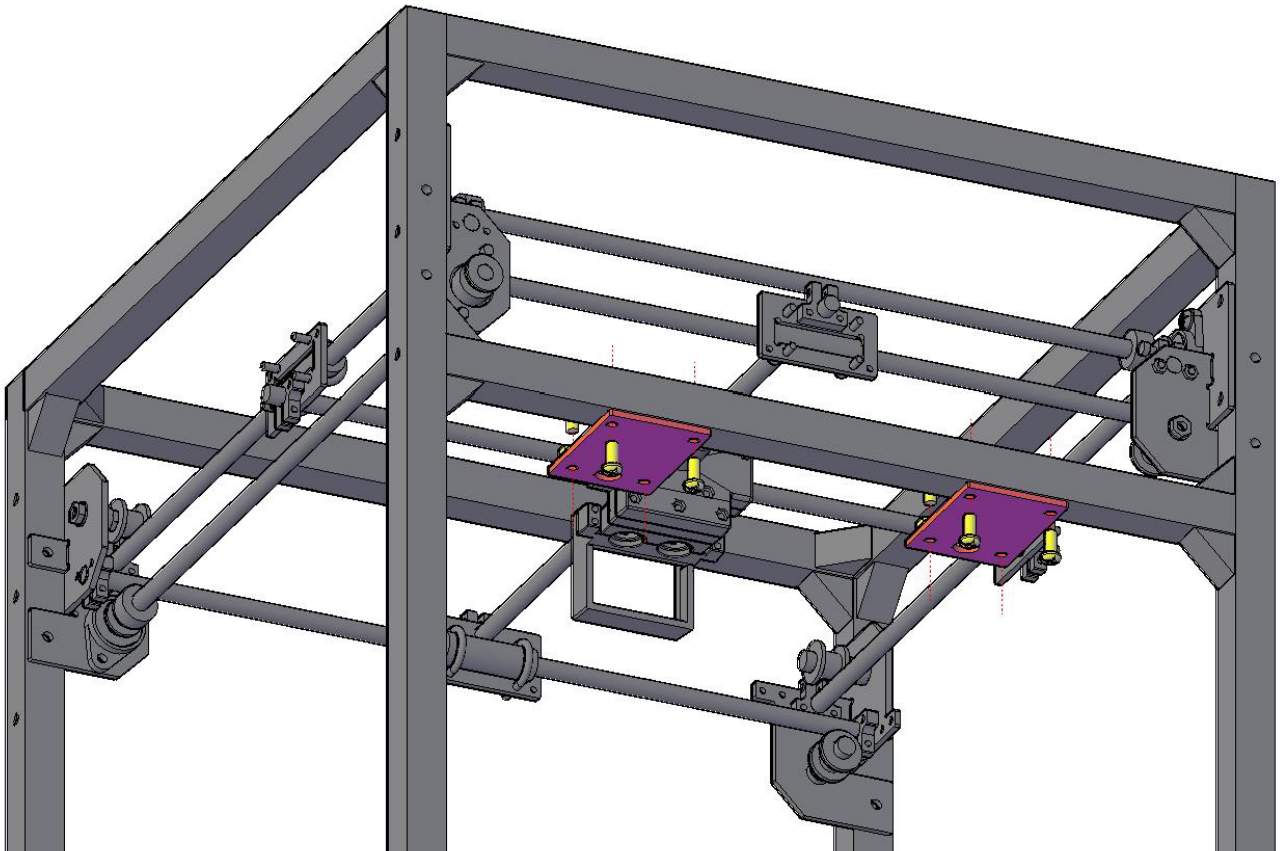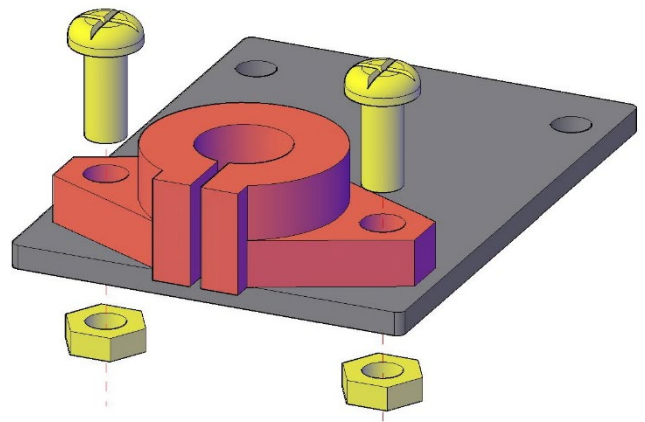




INSTALLATION GUIDE

- Z-AXIS DOWN-PLATE

Z-axis bottom holder	
Parts	Quantity
Z-axis bottom holder	2
Rod holder(12mm)	2
M5*16	4
M5 nut	4
M5*20	4
M5 nut	4

Z-axis motor holder	
Parts	Quantity
Z-axis motor holder	1
Z-axis motor	1
Z-axis coupler	1
M3*10	4
M5*20	2
M5 nut	2

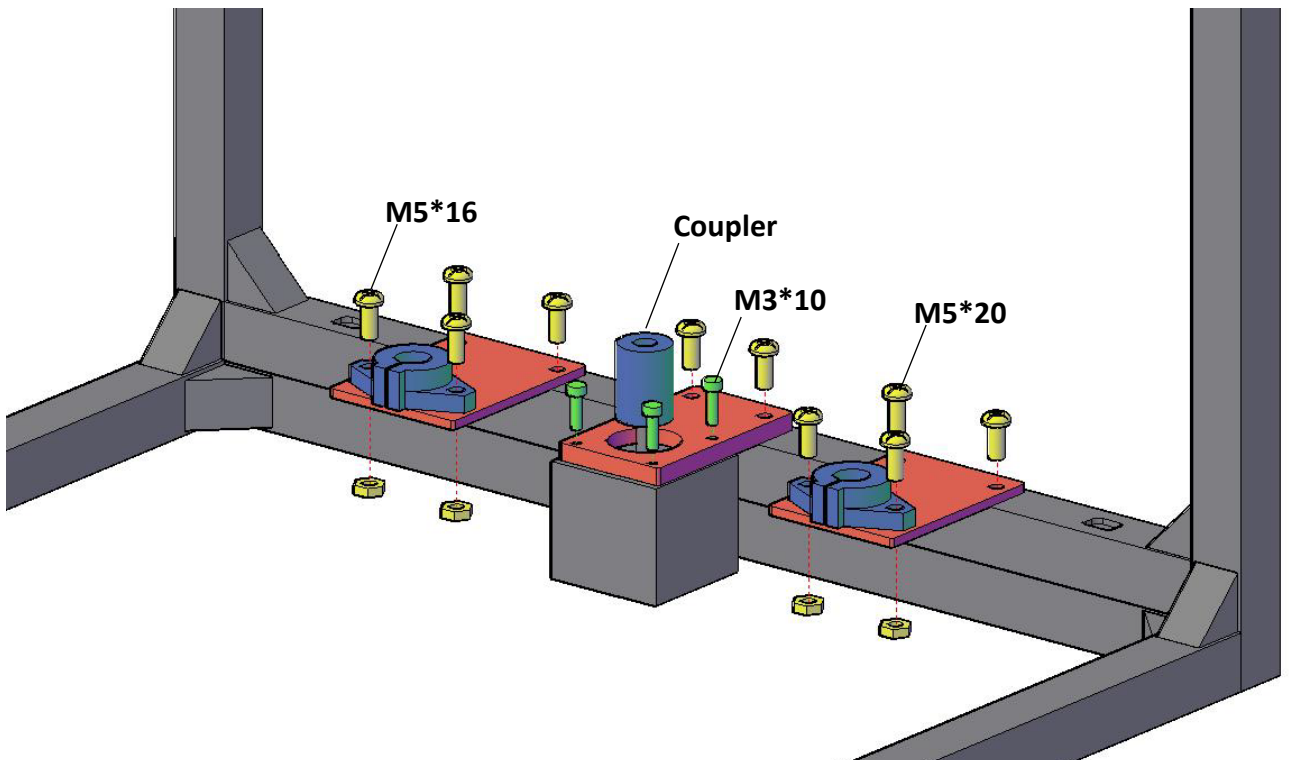




INSTALLATION GUIDE

- BED SUPPORT


Bed support					
Parts	Quantity	Parts	Quantity	Parts	Quantity
Bed support	1 set	Flange bushing	2	Screw nut	1
90° Bracket	6	M4*16	8	M3*12	4
M3*6	12	M4 nut	8	M3 nut	4
M3*12	8	U-bolt	2		
M3 nut	8	M6 nut	4		

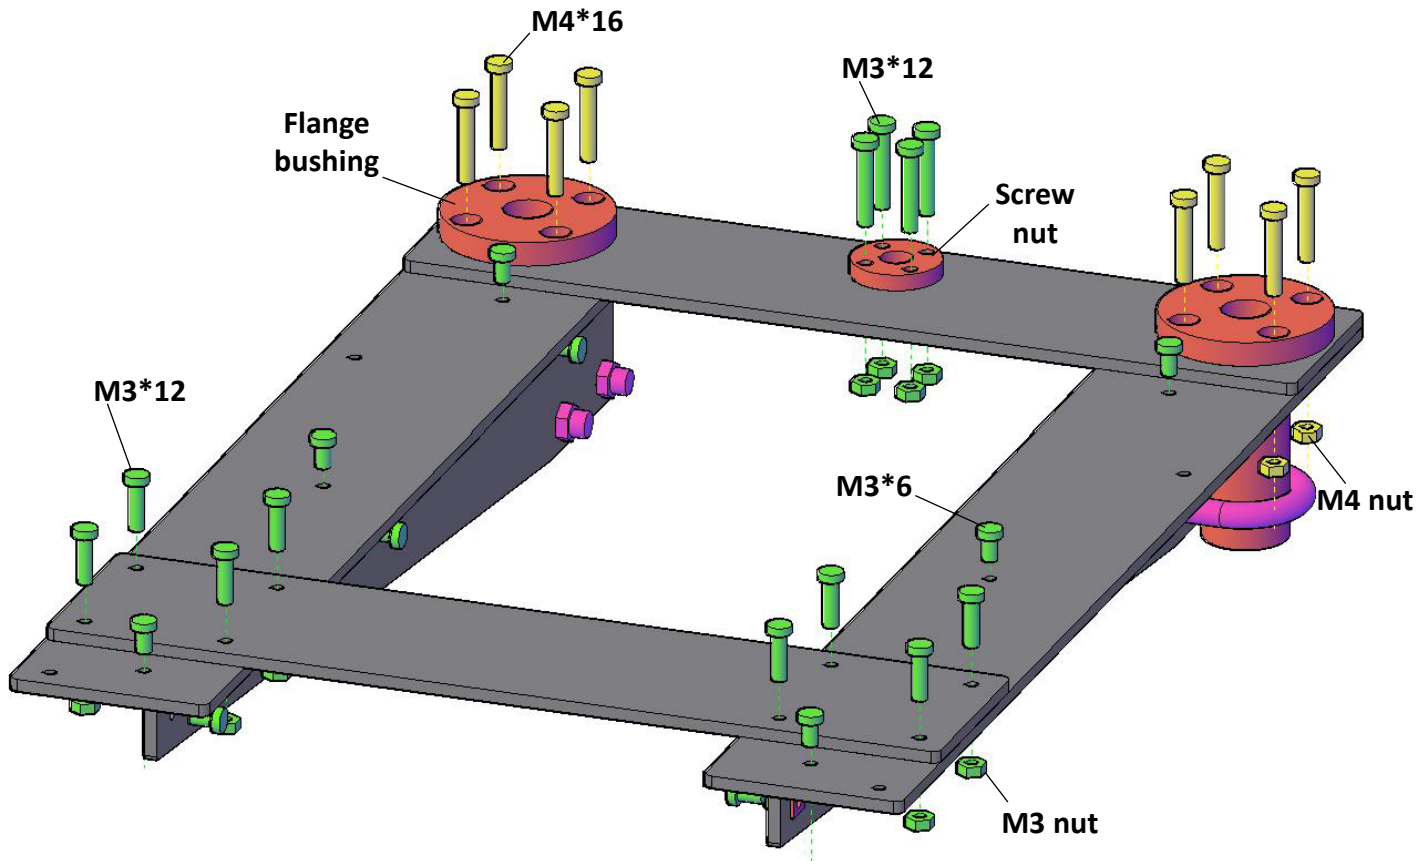




INSTALLATION GUIDE

- HEATED BED
- Z-AXIS MOVEMENT RAIL

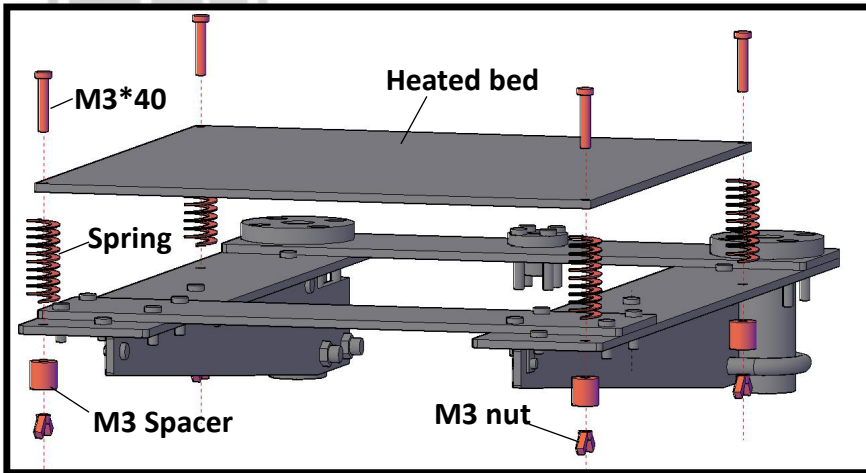

Heated bed	
Parts	Quantity
Heated bed	1
M3*40	4
Bed spring	4
M3 Spacer (10mm)	4
Butterfly nut	4


Z-axis movement rail	
Parts	Quantity
Guide rod (12 t / 400 mm)	2
Lead screw	1

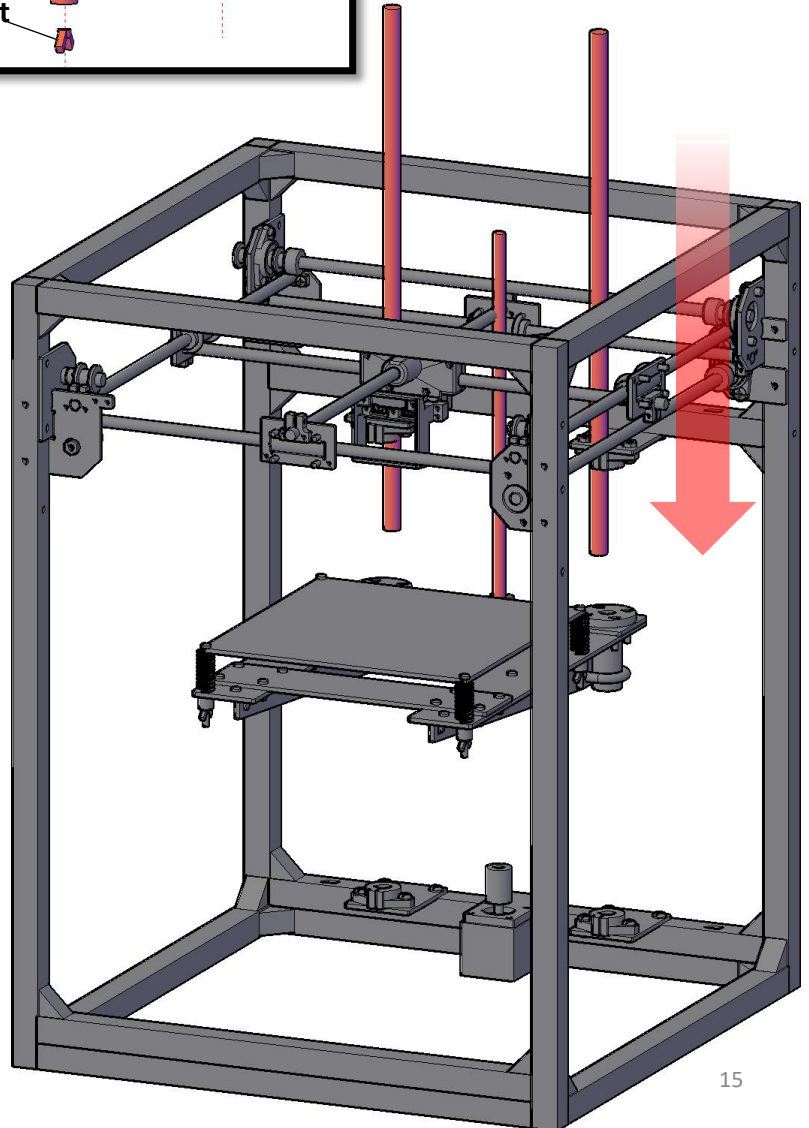




INSTALLATION GUIDE

- X-AXIS ENDSTOP SWITCH

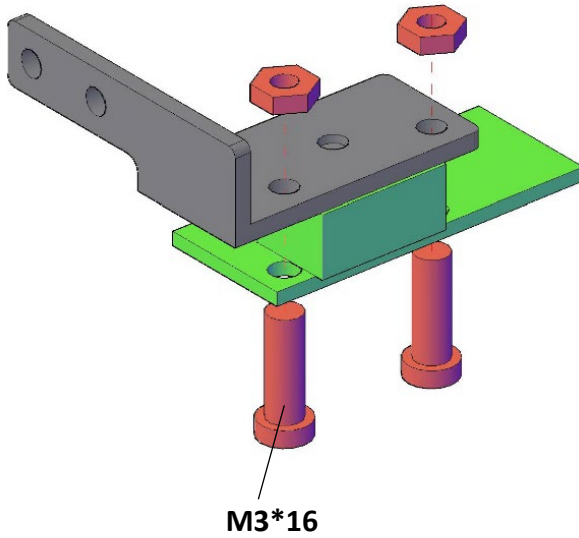


X-axis endstop switch	
Parts	Quantity
Endstop holder (X axis)	1
Endstop switch	1
M3*16	2
M3 nut	2
M3*12	2
M3 nut	2

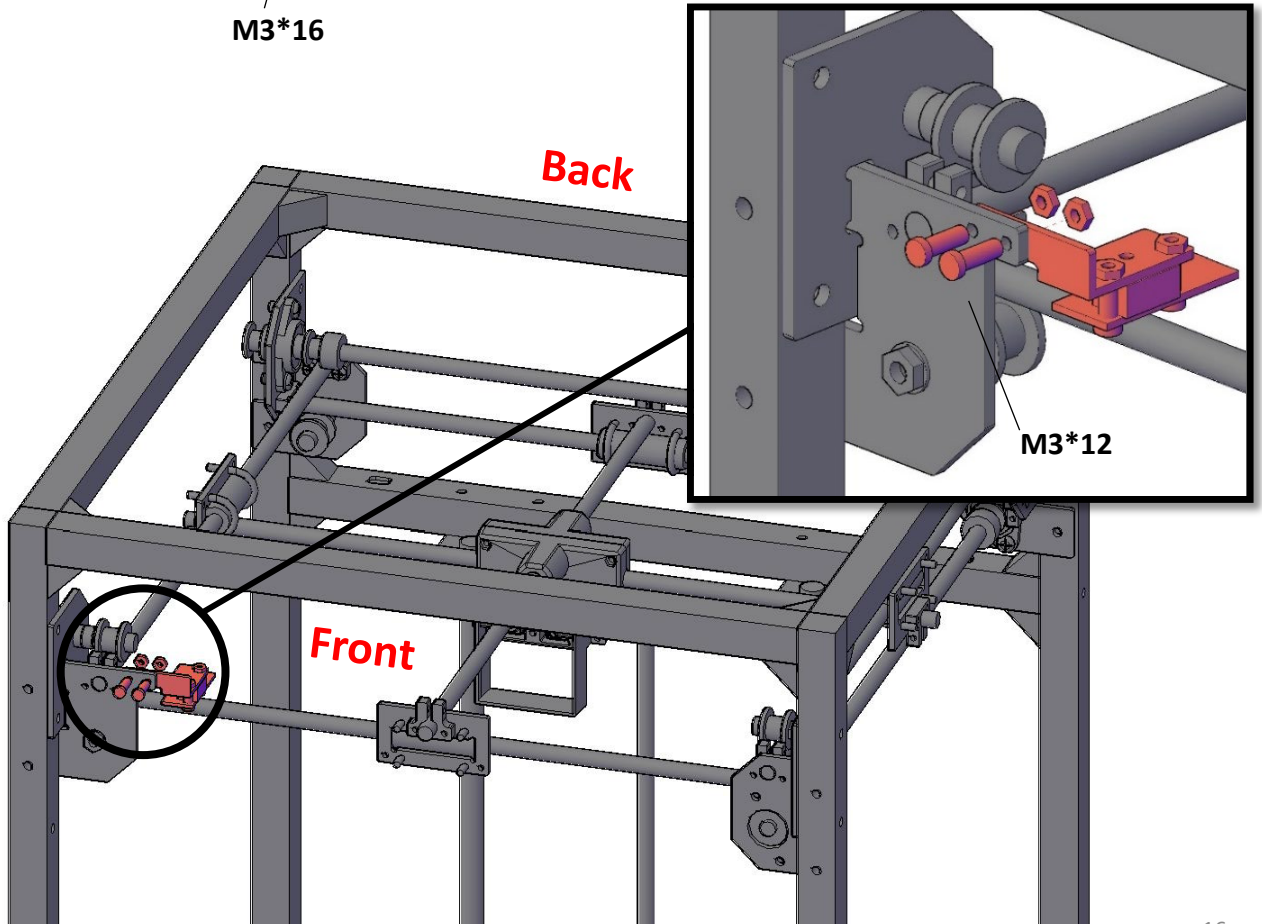





INSTALLATION GUIDE

- Y-AXIS ENDSTOP SWITCH

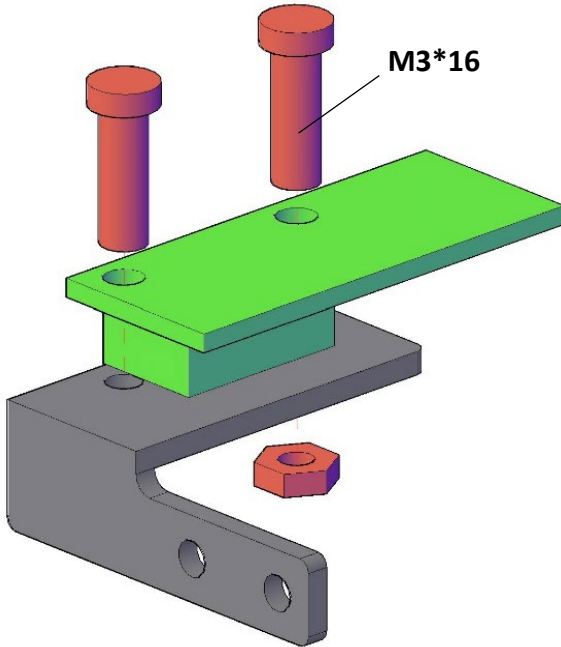

Y-axis endstop switch	
Parts	Quantity
Endstop holder (Y axis)	1
Endstop switch	1
M3*16	2
M3 nut	2
M3*12	2
M3 nut	2

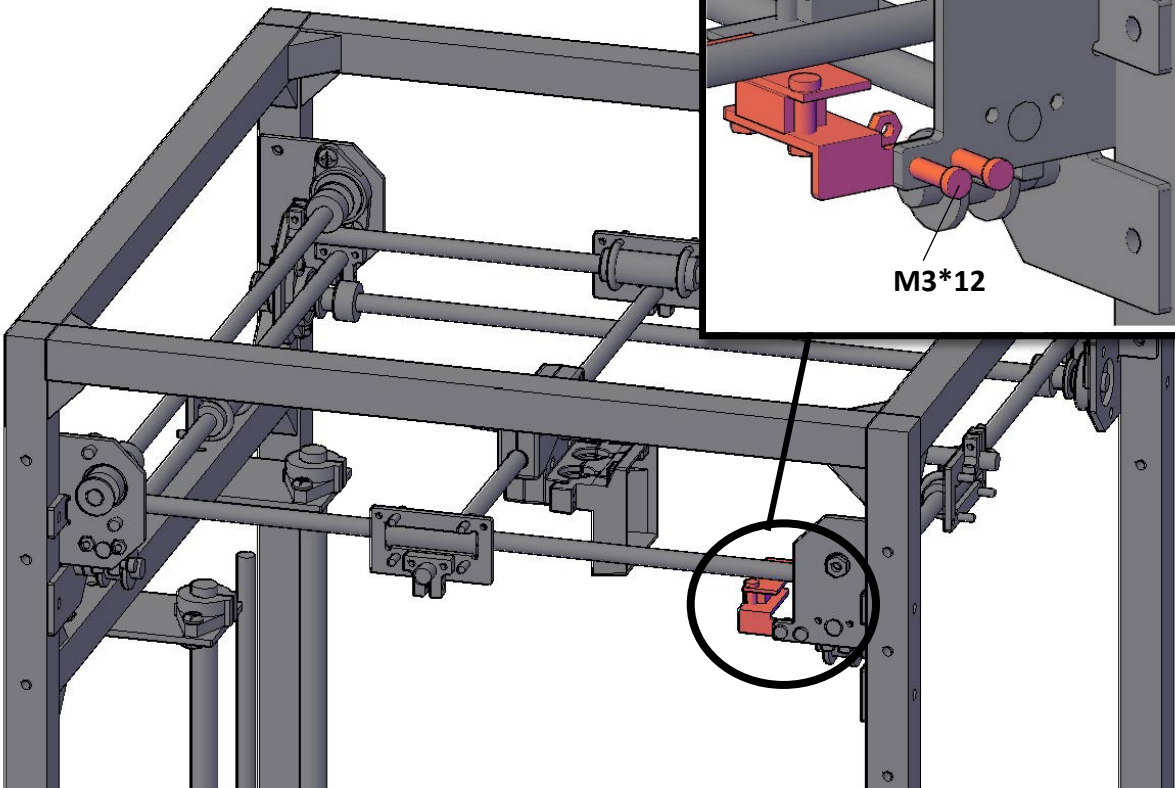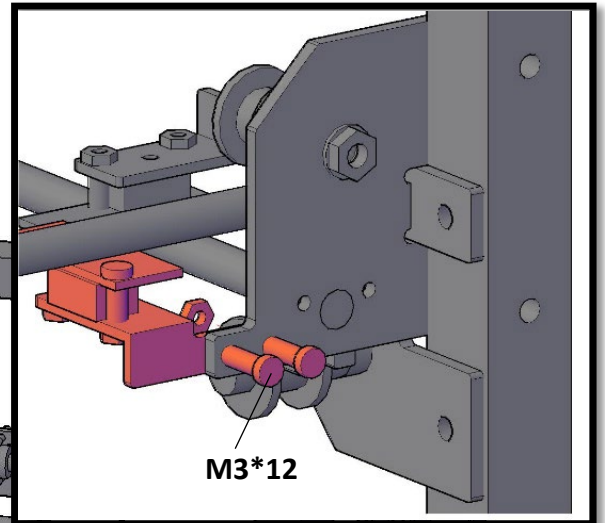





INSTALLATION GUIDE

- X, Y-AXIS

MOVEMENT MOTOR

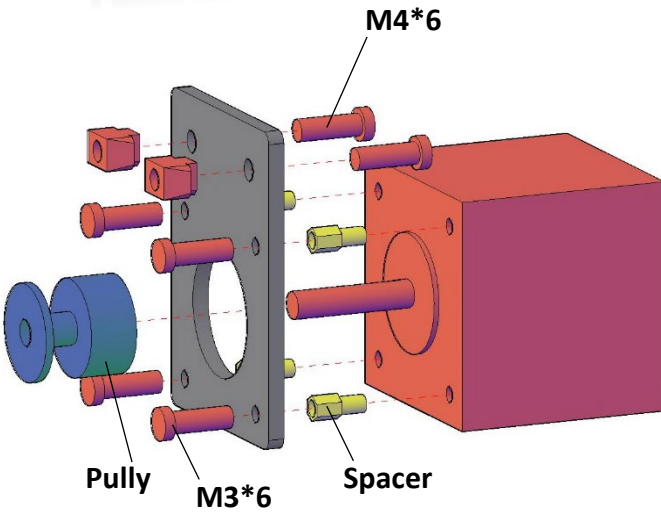

X,Y-axis movement motor	
Parts	Quantity
Motor mount	2
Nema17 (40mm)	2
Spacer	8
M3*6	8
Pully(5mm)	2
M4*6	4
M4 T-nut	4

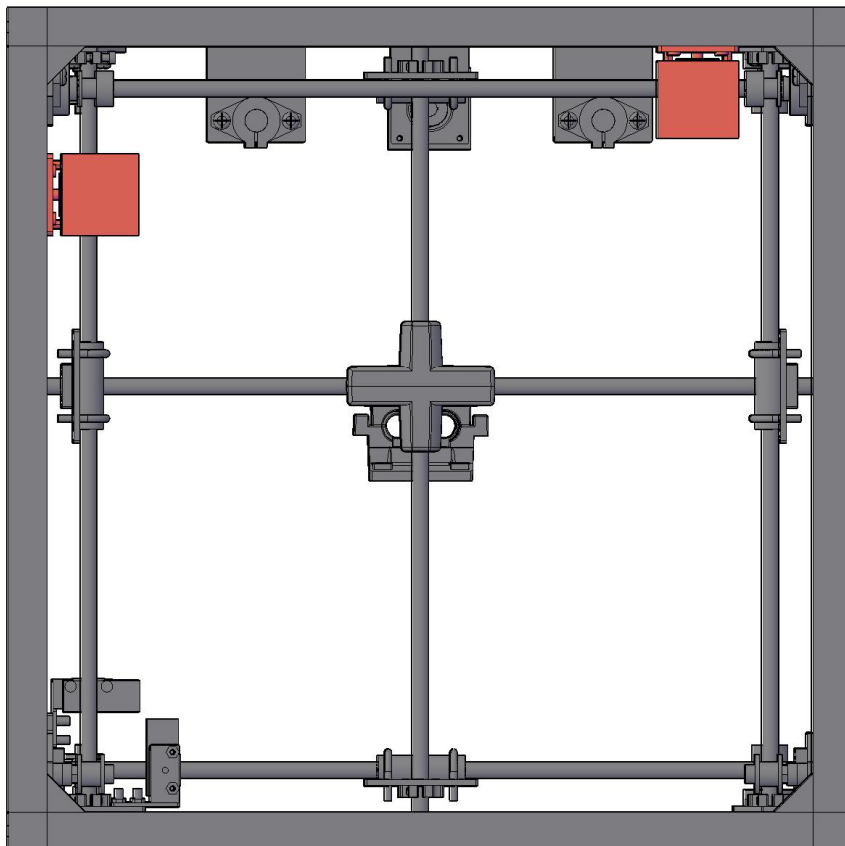





INSTALLATION GUIDE

- TIMING BELT

※ Please adjust the belt tension properly.


Timing belt	
Parts	Quantity
X-axis belt	2
Y-axis belt	2
Cable ties	8
X-axis motor Loop belt	1
Y-axis motor Loop belt	1

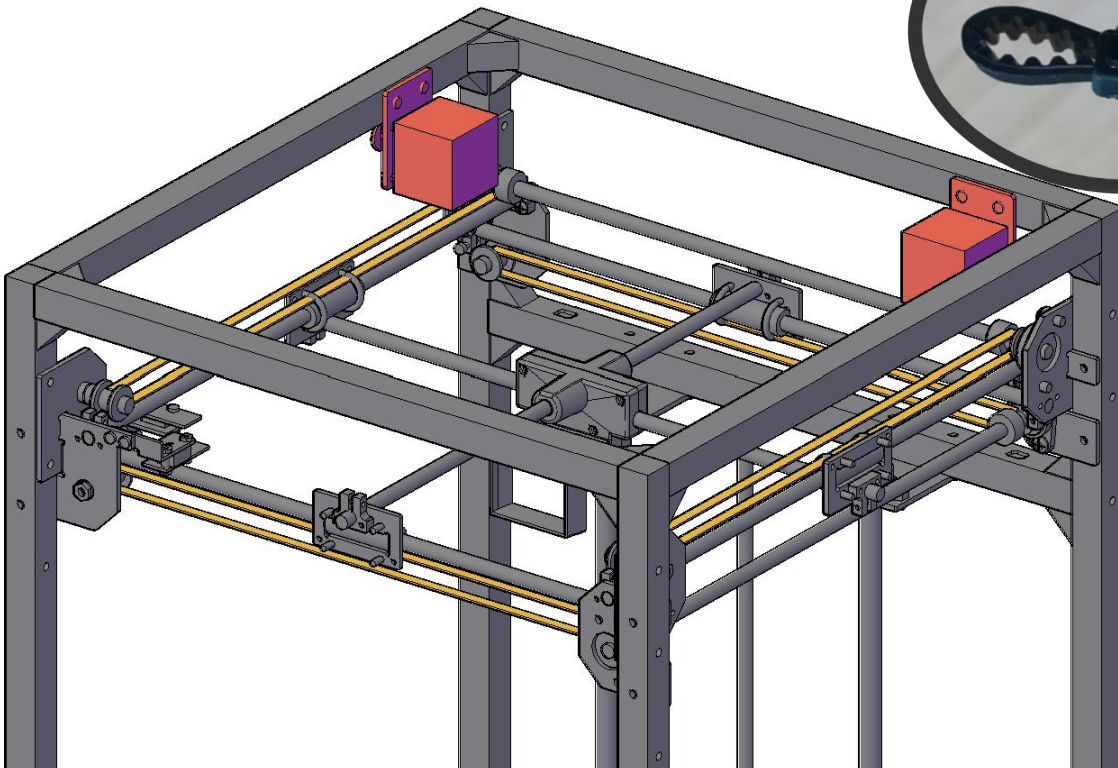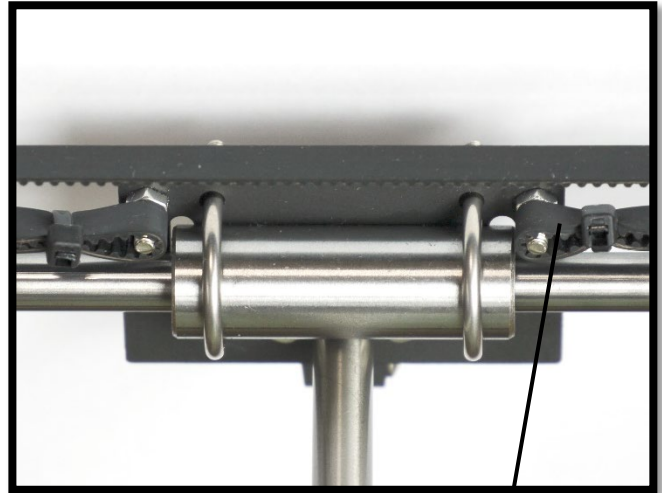




INSTALLATION GUIDE

- LCD

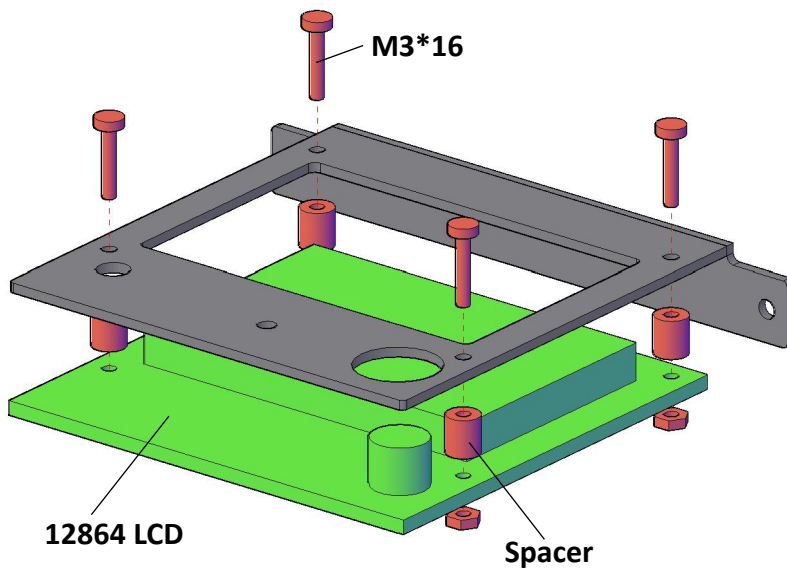

LCD	
Parts	Quantity
LCD holder	1
12864 LCD	1
M3*16	4
M3 nut	4
M3 Spacer (10mm)	4
M4*6	2
M4 T-nut	2

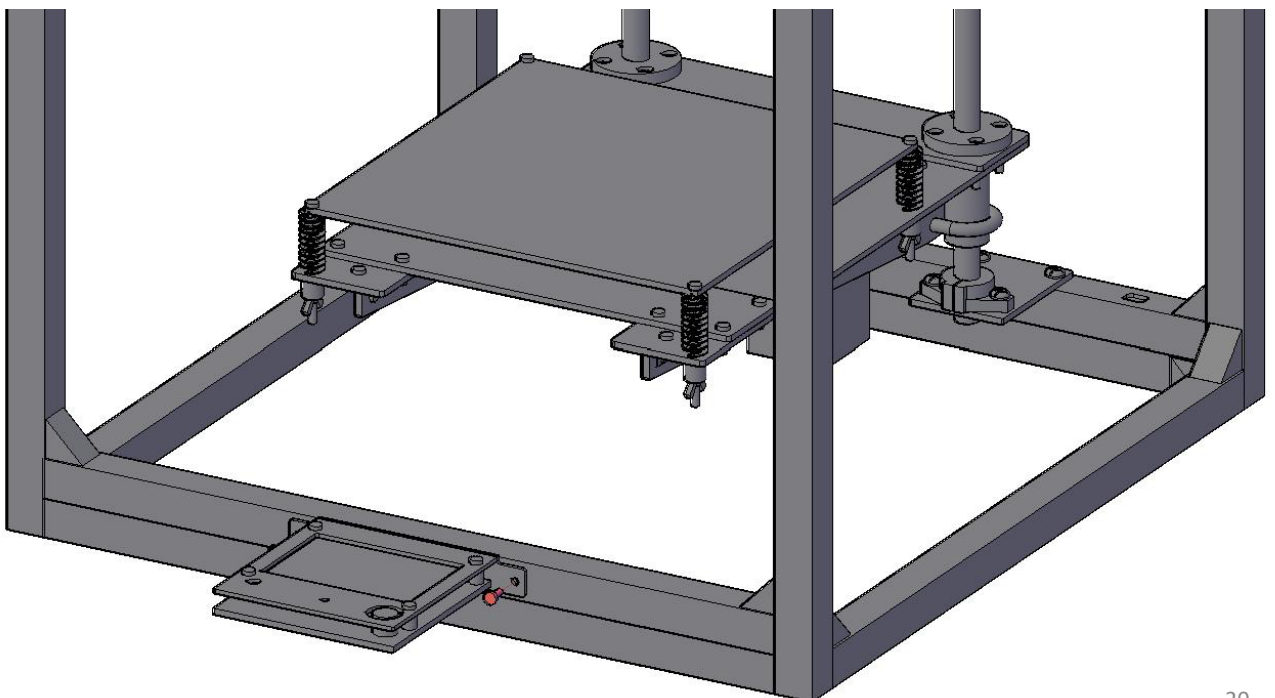






INSTALLATION GUIDE

- EXTRUDER MOTOR

※ Pay attention to the extruder direction.

Extruder motor	
Parts	Quantity
Extruder set	1
Nema17 motor	1
Spacer	2
Washer	2
Fan holder	1
Fan	1
M3*16	1
M3*35	2
M3 nut	1
M4*6	4
M4 T-nut	4

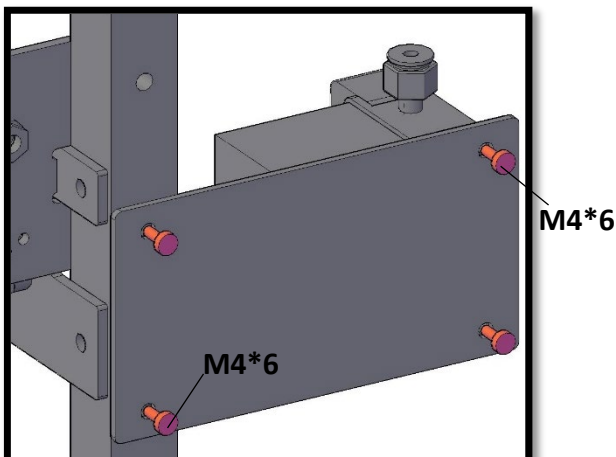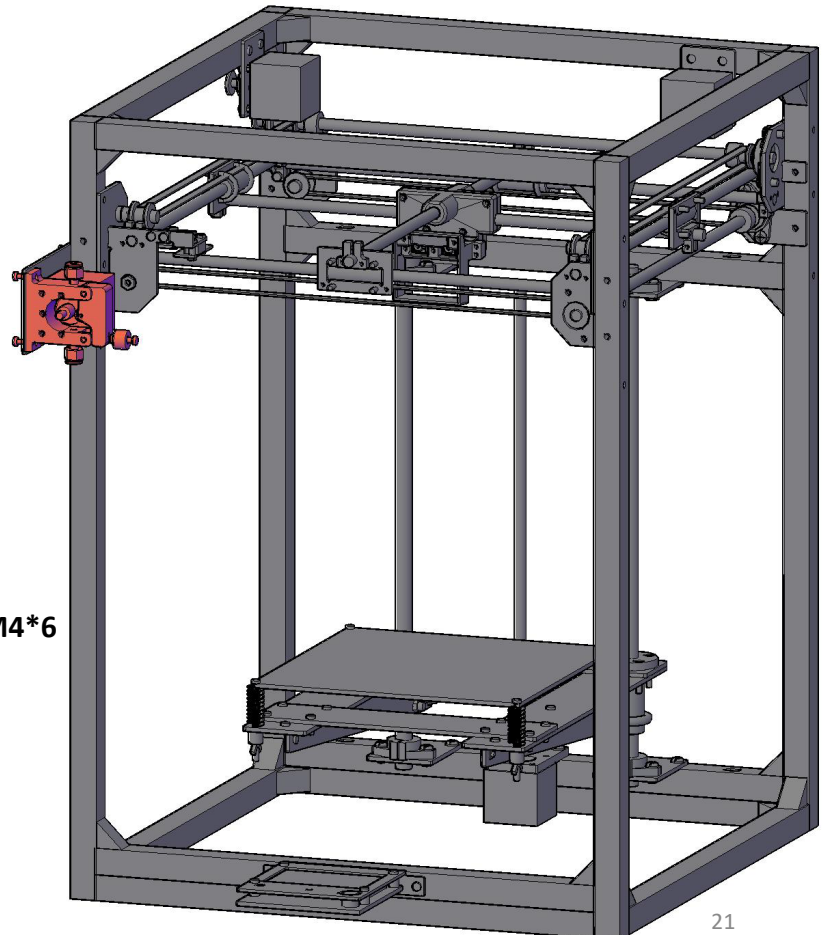
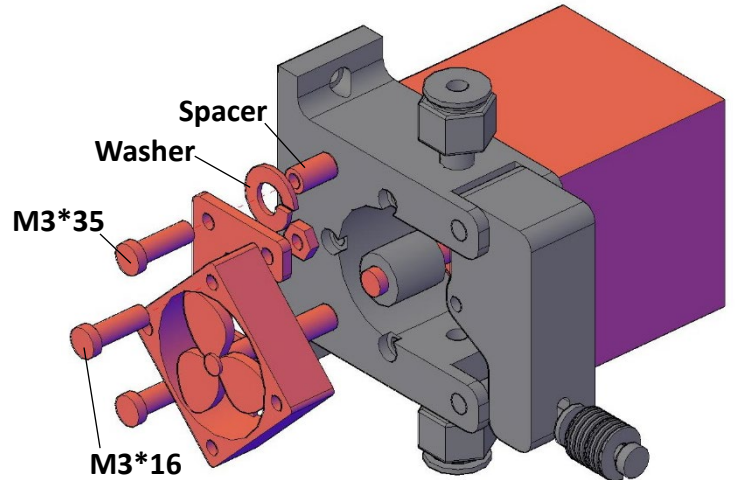




INSTALLATION GUIDE

- POWER


Power	
Parts	Quantity
Power holder	2
Power	1
M4*6	4
M4*6	2
M4 T-nut	2

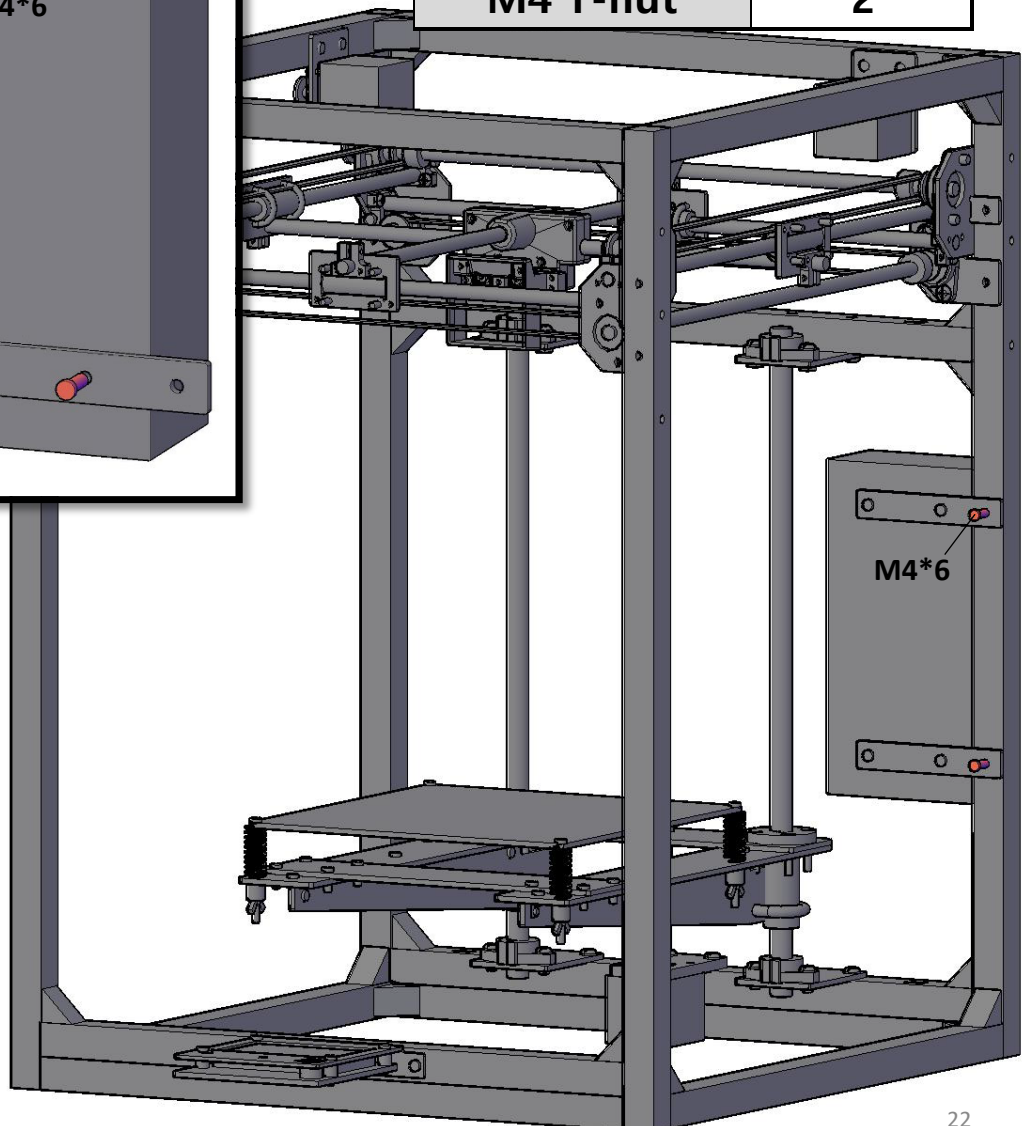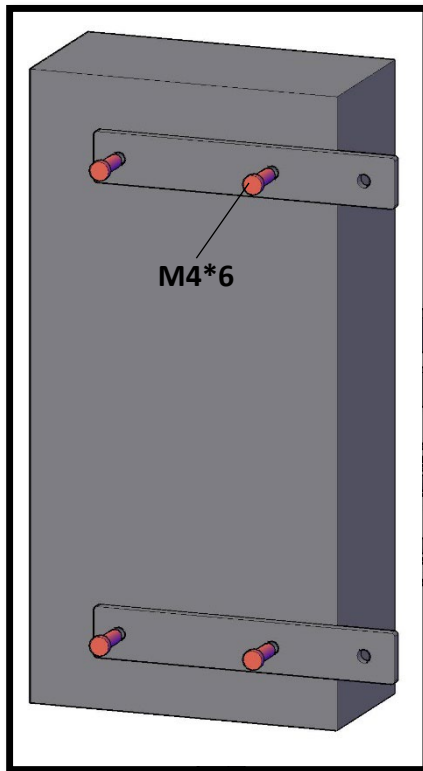



INSTALLATION GUIDE

- CONTROLLER BOARD

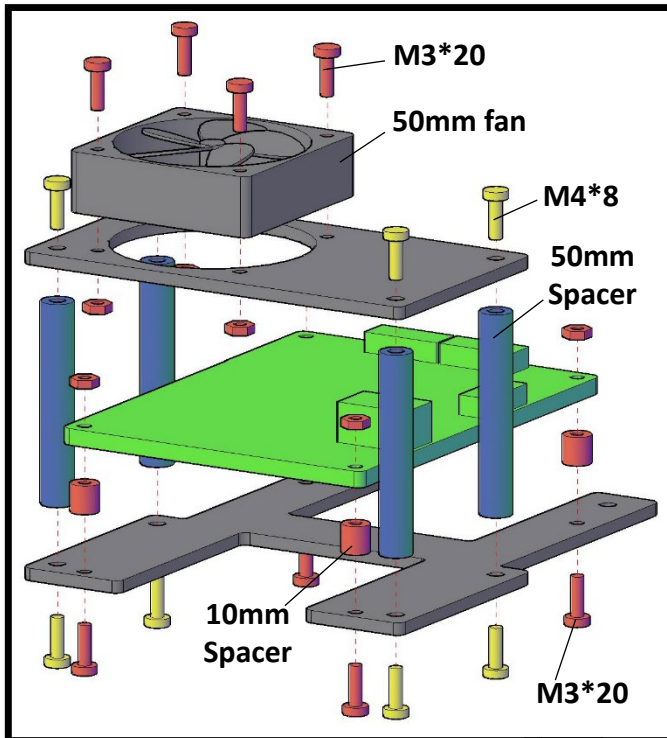


Controller Board	
Parts	Quantity
Controller Board	1
50mm fan	1
Board holder	1
Fan holder	1
M3*20	8
M3 nut	8
M4*8	8
M3 spacer (10 mm)	4
M4 spacer (50 mm)	4
M4*6	2
M4 T-nut	2

M4*6




INSTALLATION GUIDE

- SPOOL HOLDER

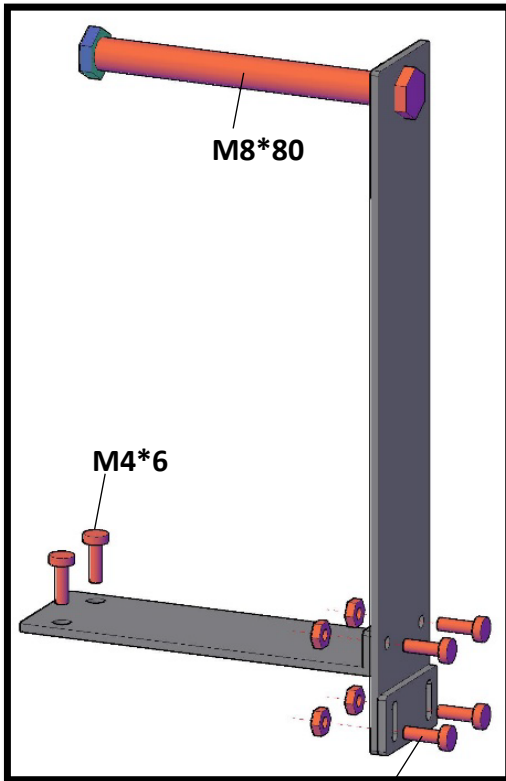

M3*8


Spool holder	
Parts	Quantity
Spool holder	1 set
M3*8	4
M3 nut	4
M8*80	1
M8 nut	2
M4*6	2
M4 T-nut	2

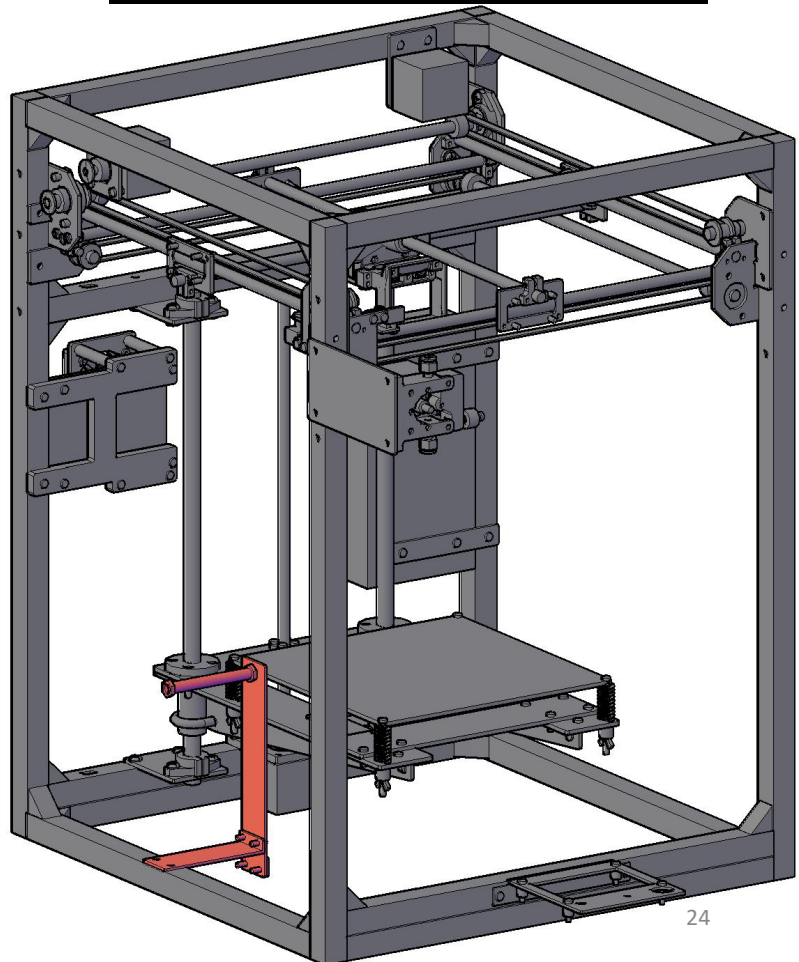





INSTALLATION GUIDE

-CASE(BACK)

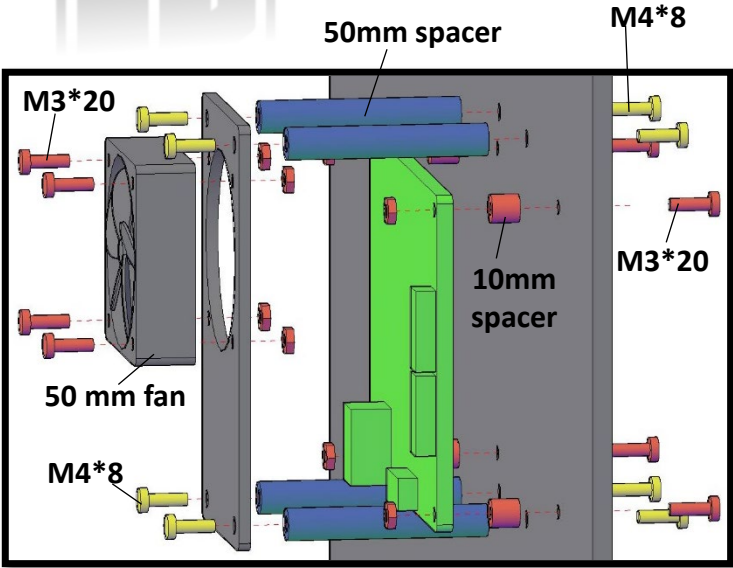

Case (Back)	
Parts	Quantity
Board	1
50mm fan	1
Fan holder	1
M3*20	8
M3 nut	8
M4*8	8
M3 spacer (10mm)	4
M4 spacer (50mm)	4
M4*6	4

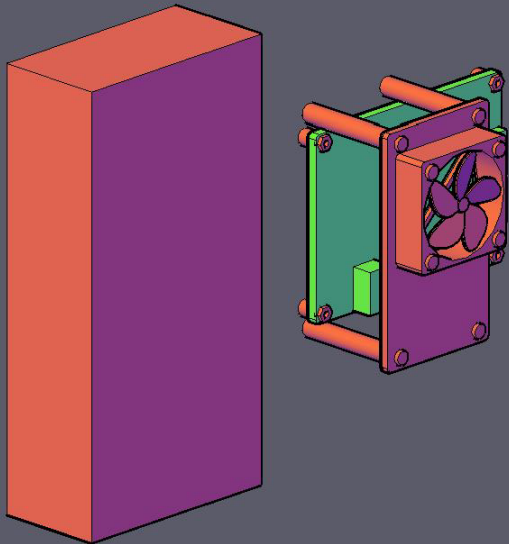
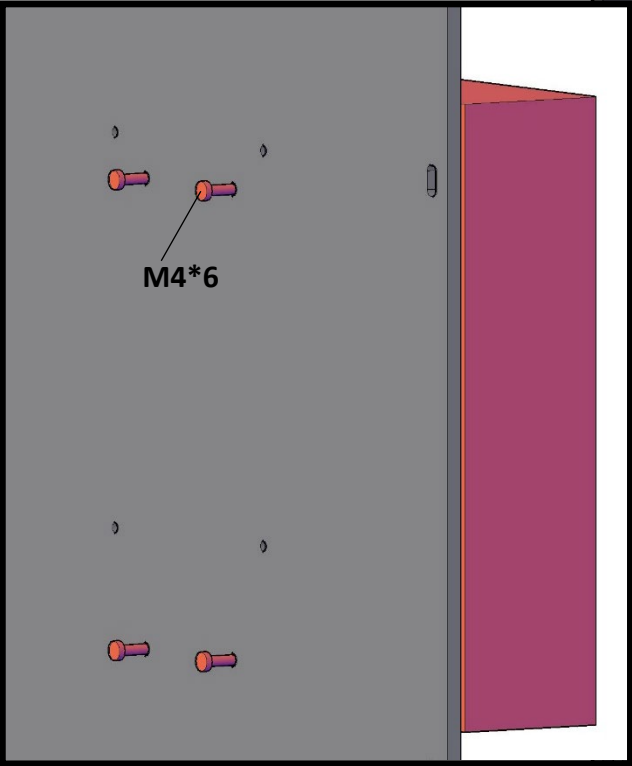






INSTALLATION GUIDE

-CASE(FRONT)

Hinge (Front)	
Parts	Quantity
Hinge	2
Hinge support	2
M6*20	8
M6 nut	8

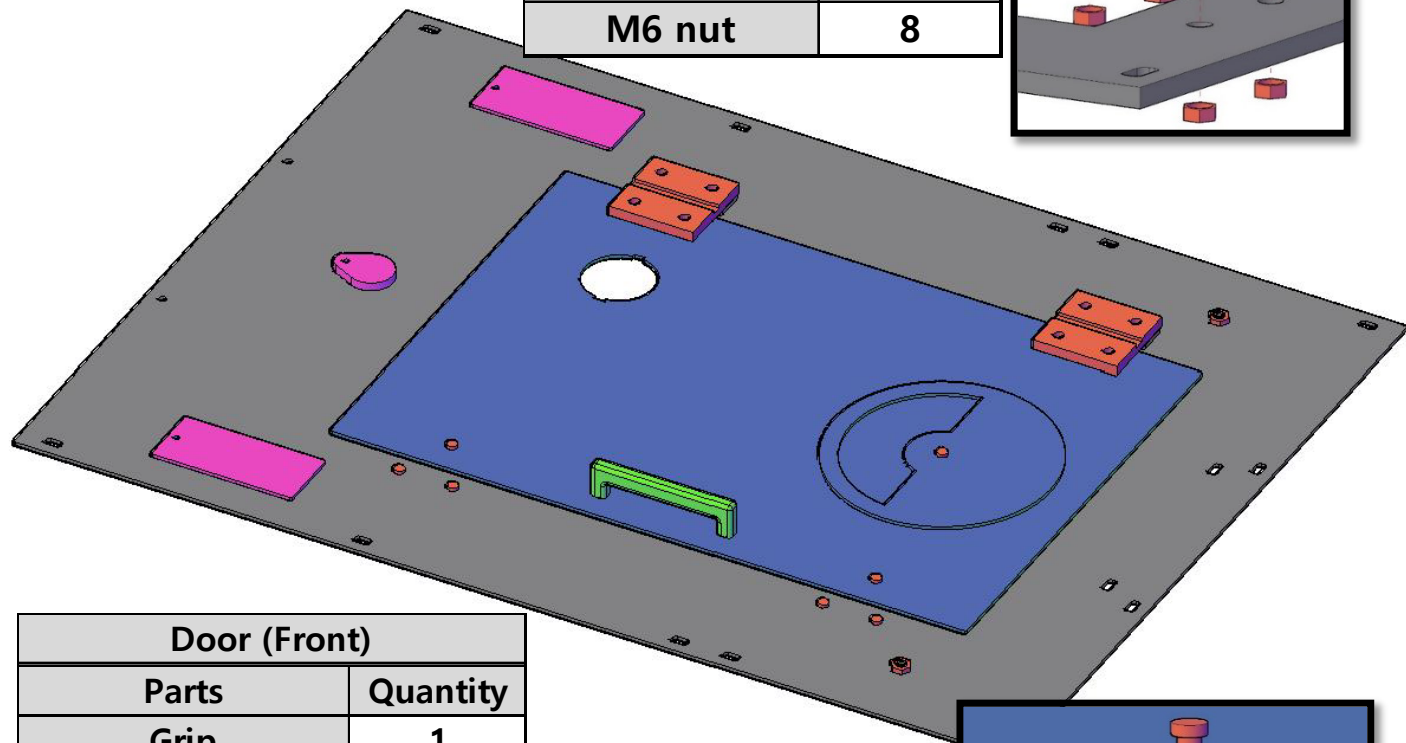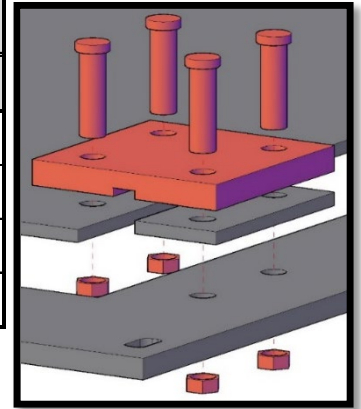

Door (Front)	
Parts	Quantity
Grip	1
M4*6	2
M4*12	6
M4 nut	6
Flat steel	2
Flat steel support	2
Magnet	2
Front hole cover	1
M3*16	1
M3 washer	2
M3 Nylon nut	1

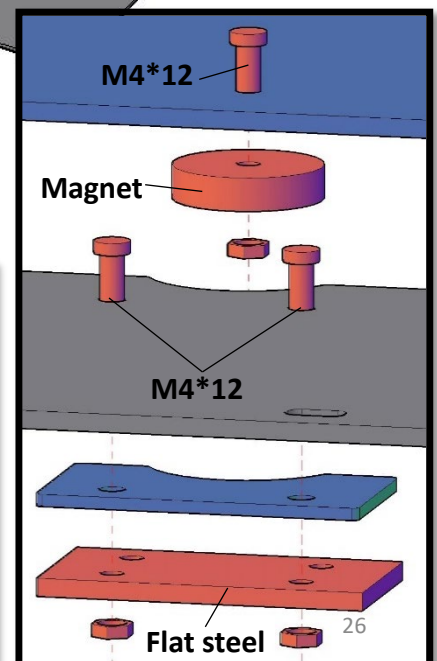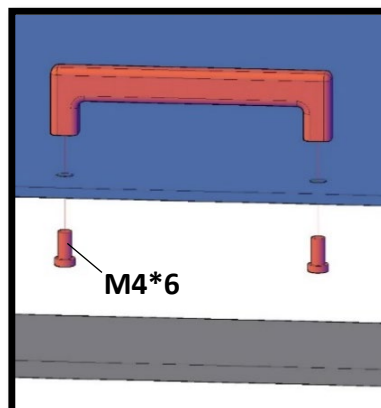





INSTALLATION GUIDE

-CASE(FRONT)

Filament hole (Front)	
Parts	Quantity
Fitting	2
M6 nut	2

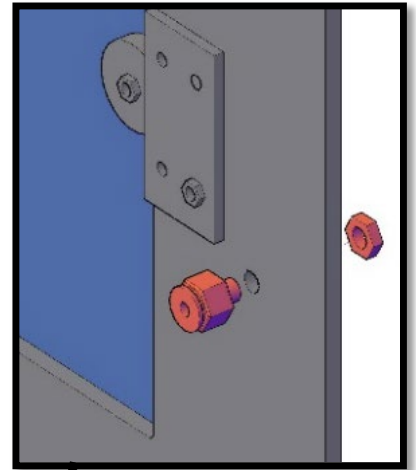

Hole cover (Front)	
Parts	Quantity
Shaft cover	1
Side cover	2
M3*12	3
M3 nut	3


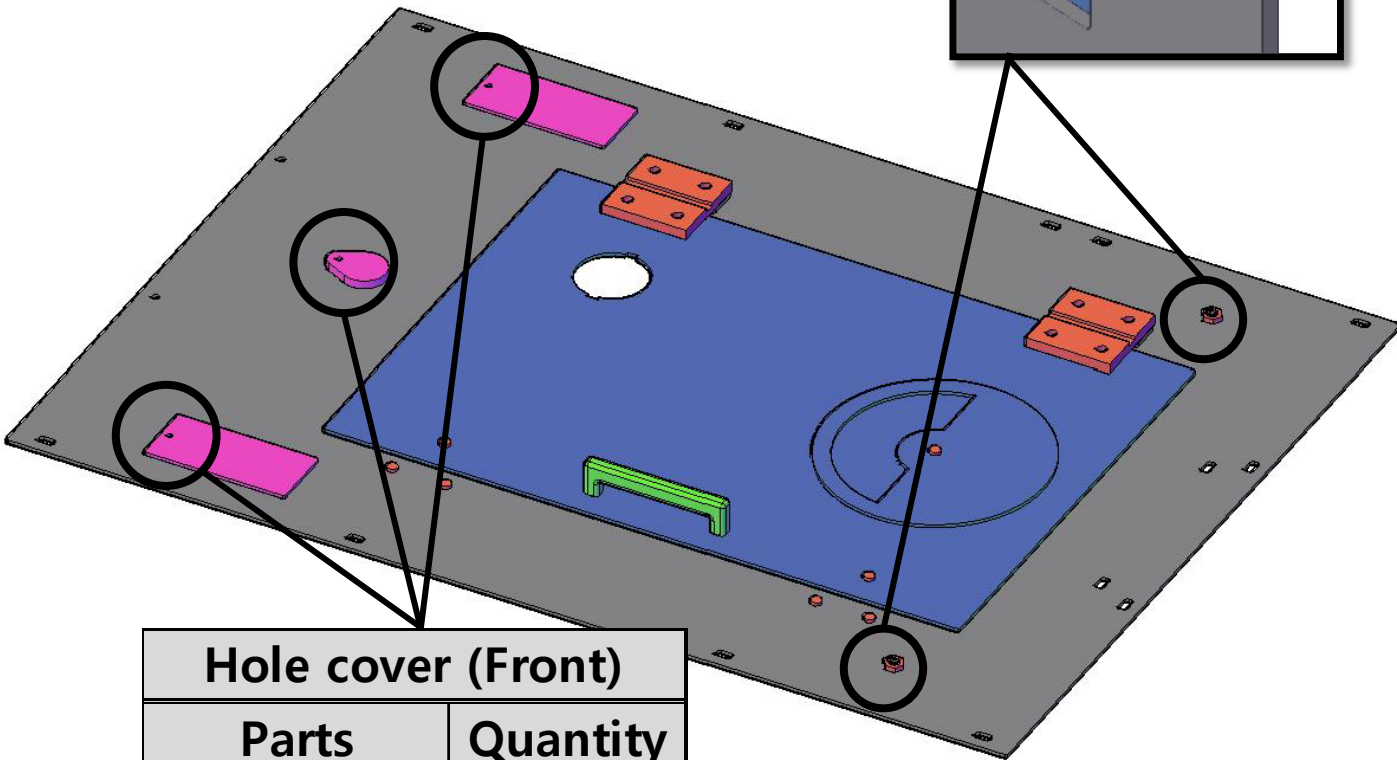






INSTALLATION GUIDE

-CASE(SIDE 1)

Hinge (Side)	
Parts	Quantity
Hinge	2
Hinge support	2
M6*20	8
M6 nut	8

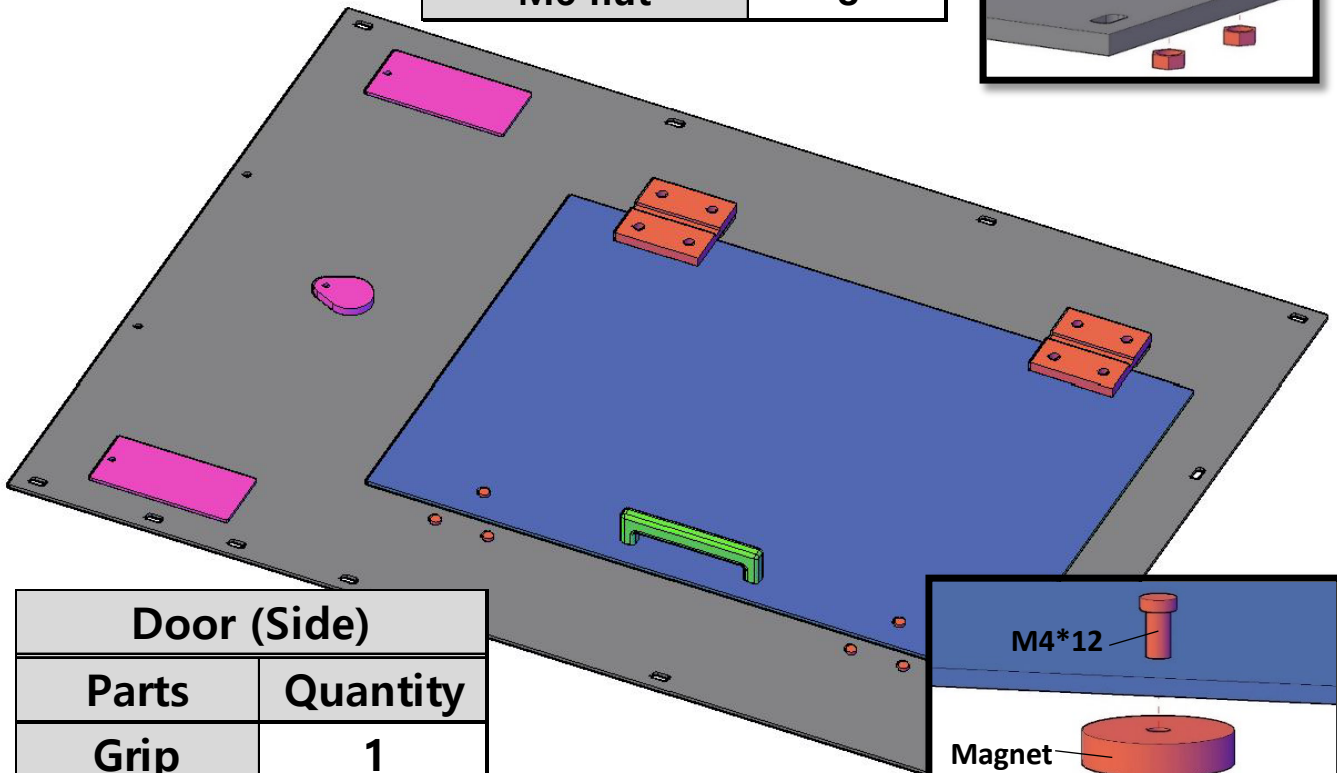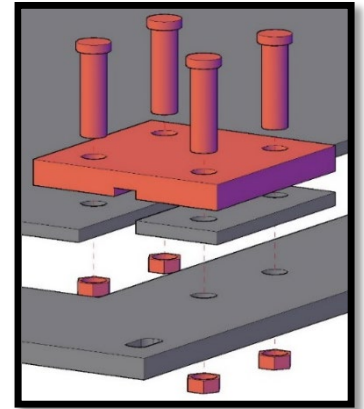


Door (Side)	
Parts	Quantity
Grip	1
M4*6	2
M4*12	6
M4 nut	6
Flat steel	2
Flat steel support	2
Magnet	2

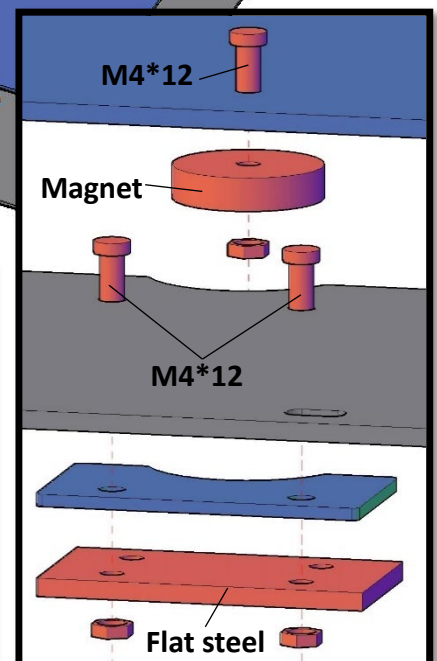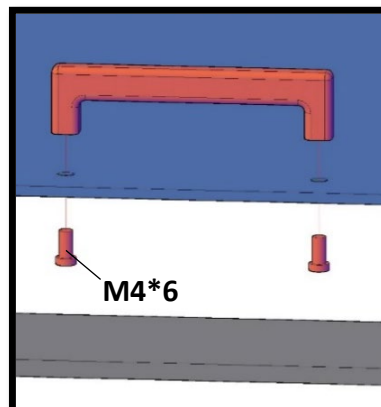



INSTALLATION GUIDE

-CASE(SIDE 1)

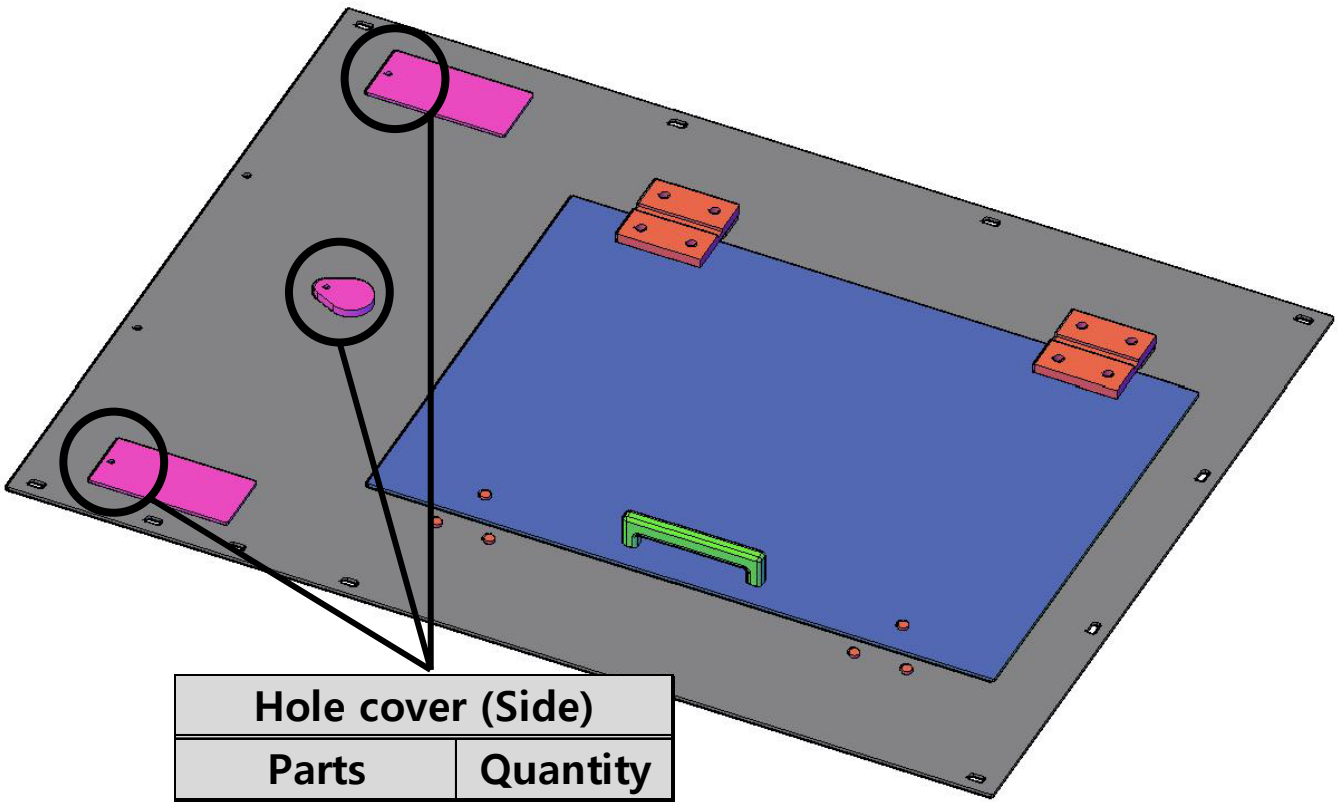


Hole cover (Side)	
Parts	Quantity
Shaft cover	1
Side cover	2
M3*12	3
M3 nut	3



INSTALLATION GUIDE

-CASE(SIDE2)

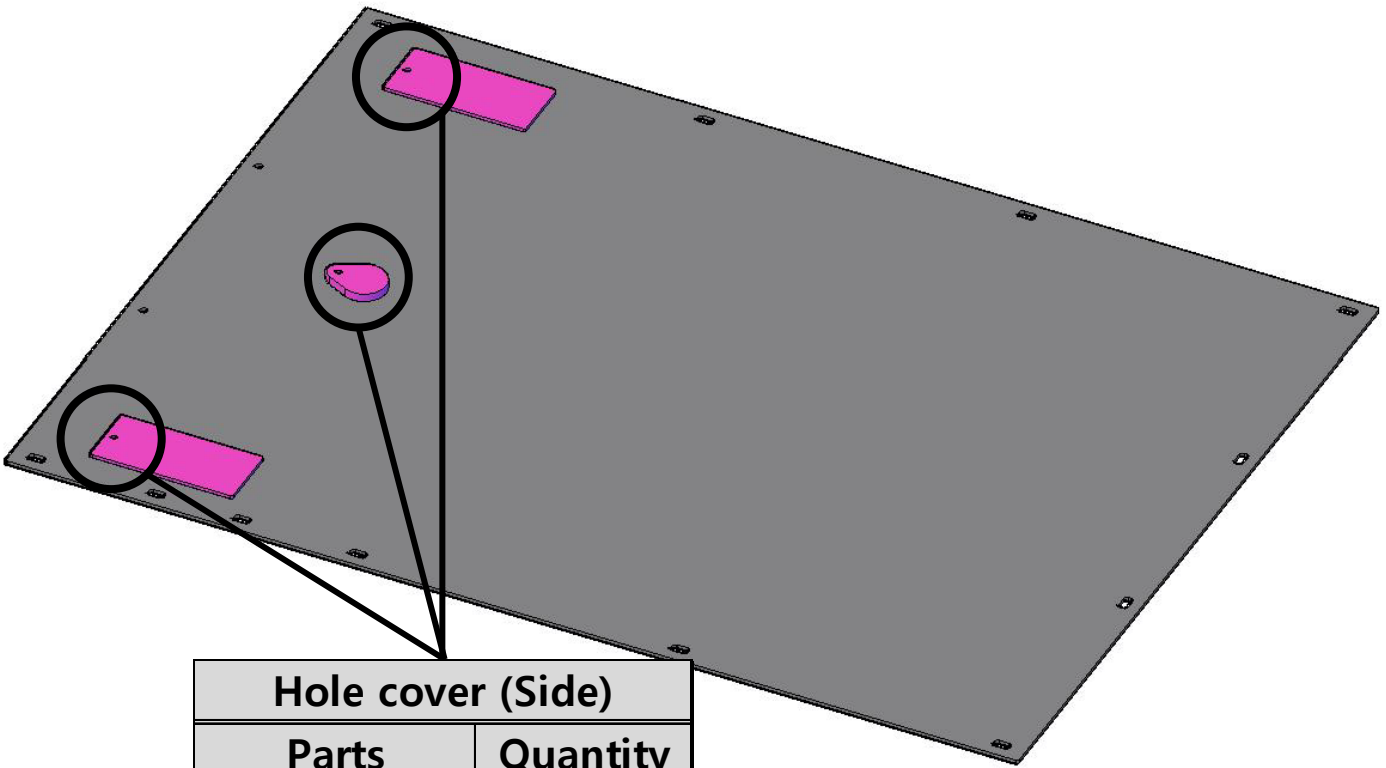



Hole cover (Side)	
Parts	Quantity
Shaft cover	1
Side cover	2
M3*12	3
M3 nut	3



INSTALLATION GUIDE

-CASE


Case	
Parts	Quantity
M4*6	64
M4 T-nut	64

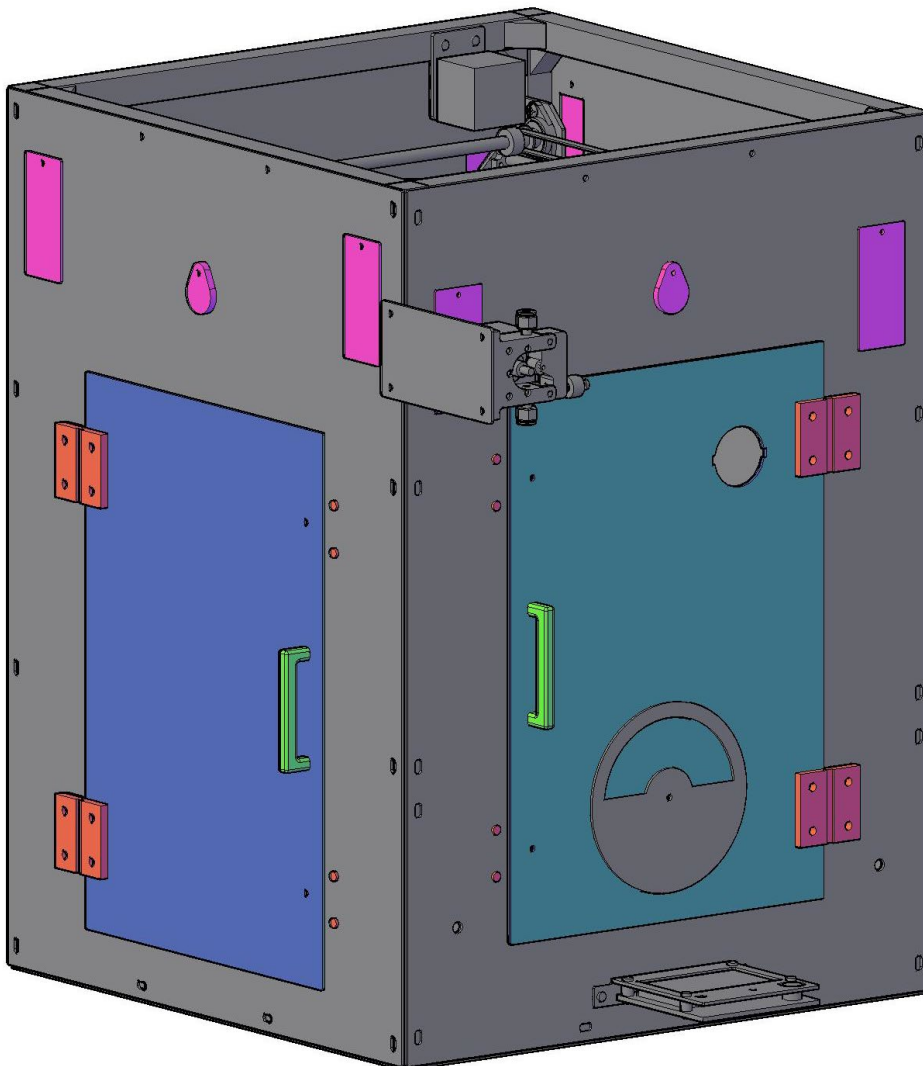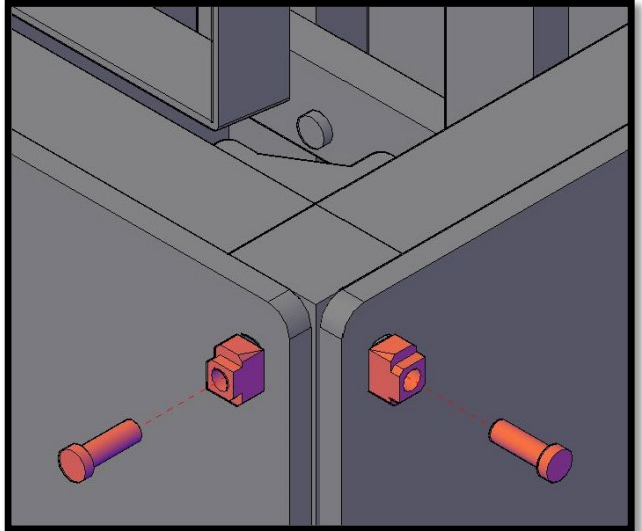







INSTALLATION GUIDE

- COVER

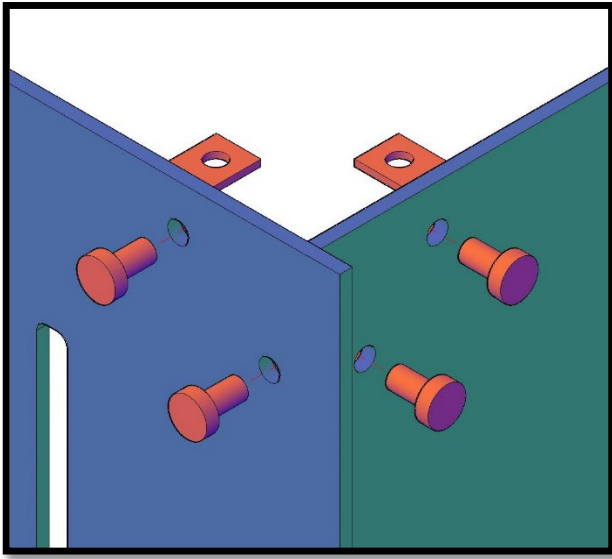

Cover	
Parts	Quantity
Cover	1 set
Bracket	28
M3*4	56
Front hole cover	1
M3*16	1
M3 washer	2
M3 Nylon nut	1

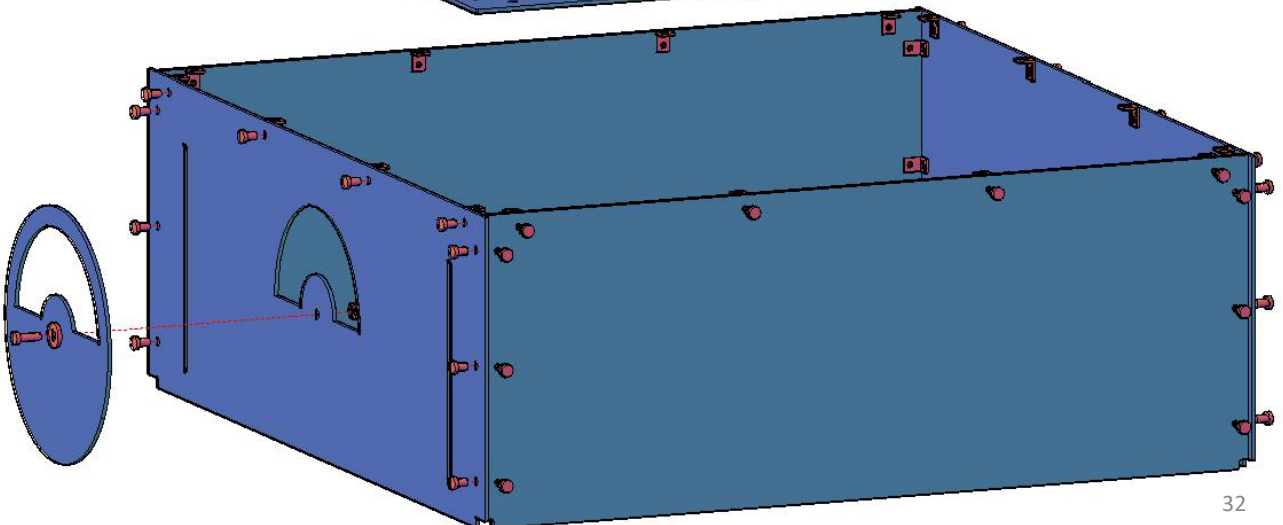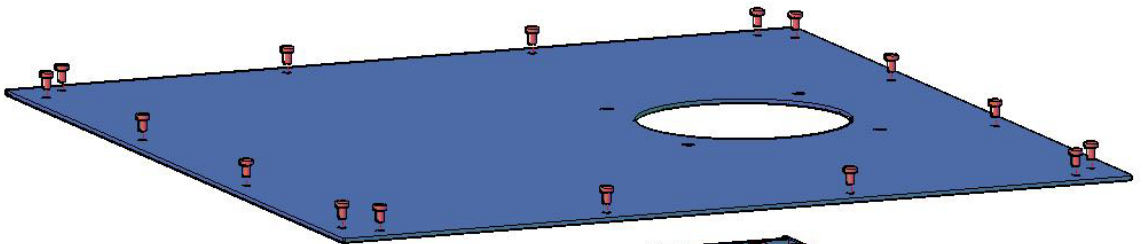 

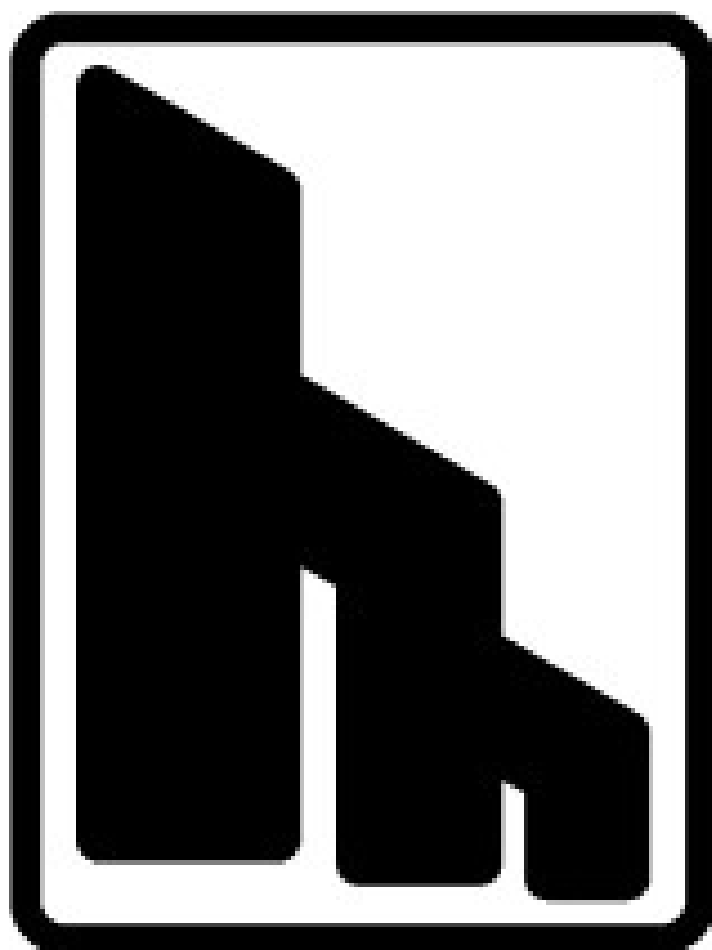

I M E R G I N E

THANK YOU VERY MUCH